


## STEP 1

Choose Runner Frame height.

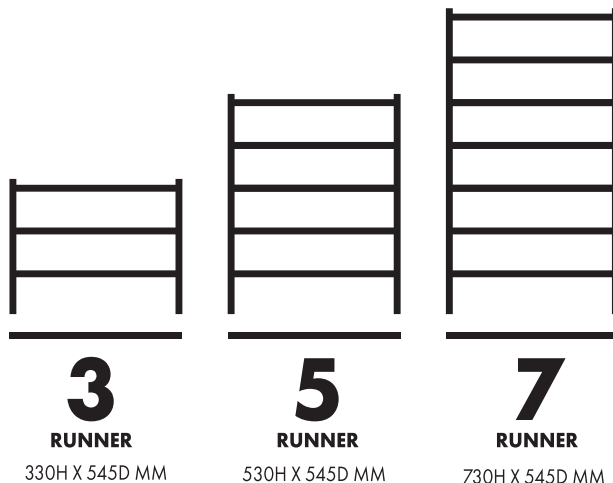


## STEP 2

Choose your Cross Bar width and Connector type.

Cross Bars

**230** OR **435**



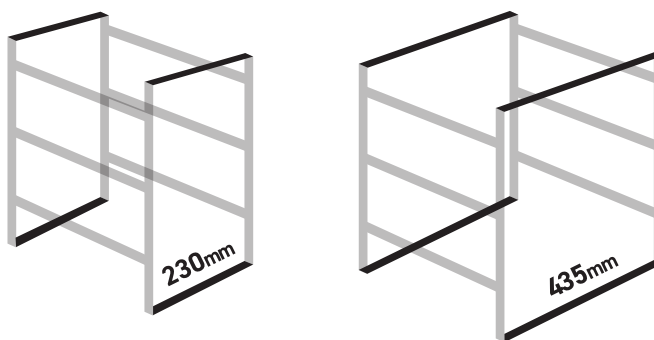


Connectors

**L CONNECTORS** OR **T CONNECTORS**

Use when using Runner Frames as stand alone items

Use to tower more than  
1 Runner Frame together

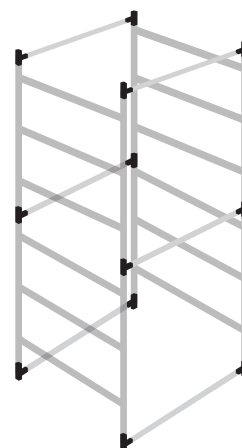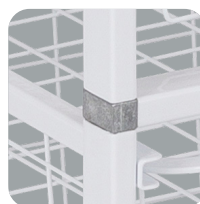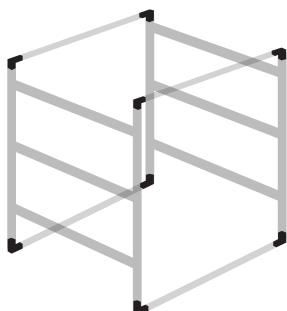


**STEP 3**

Choose your Baskets.


Available in:

- Wire or Mesh
- Heights of:
  - 85mm
  - 185mm
  - 285mm

**1 RUNNER**

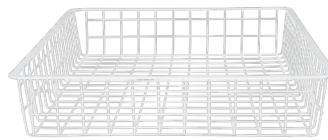


**2 RUNNER**

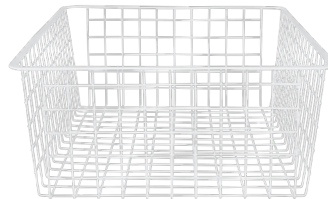


**3 RUNNER**

\*ONLY AVAILABLE  
IN 410 WIDTH

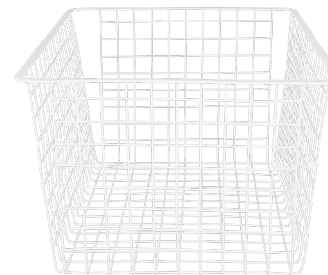

**! WARNING**

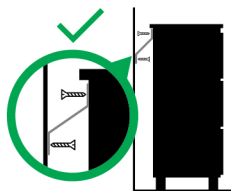

**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER put a TV on this furniture**



**THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.**

To help avoid any serious injury or death, this product includes a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing hardware is not included since different surface materials require different attachments. Please seek professional advice if you are in doubt what fixing hardware to use. Regularly check your fixing device.

MADE IN CHINA

Distributed by:

Visy Retail Services Pty Ltd (AU): 1300 734 714

Visy Board Limited (NZ): 0800 443 058

[flexistorage.com.au](http://flexistorage.com.au)

[flexistorage.co.nz](http://flexistorage.co.nz)