 


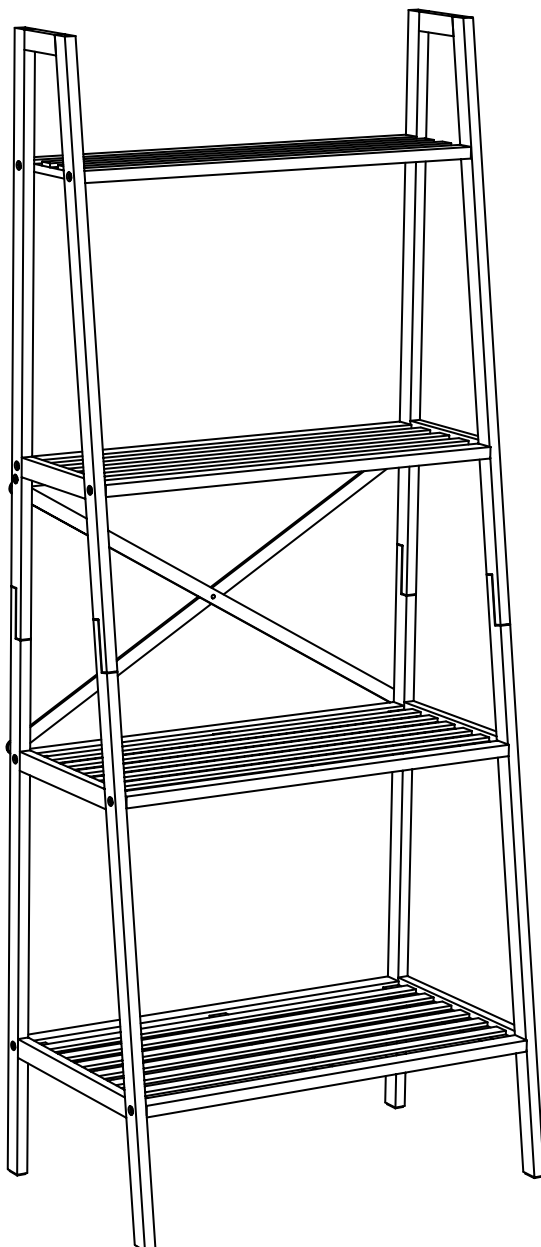


THIS PRODUCT SHOULD BE ANCHORED TO A WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.

To help avoid any serious injury or death, this product includes a wall strap to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing hardware is not included since different surface materials require different attachments. Please seek professional advice if you are in doubt as to which fixing hardware to use. Regularly check your fixing device.



 ⚠ WARNING

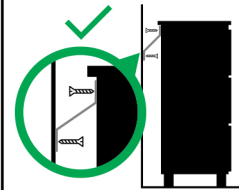


Children have died from furniture tipover.

 - ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.


 




 

 
NEVER put a TV on this furniture

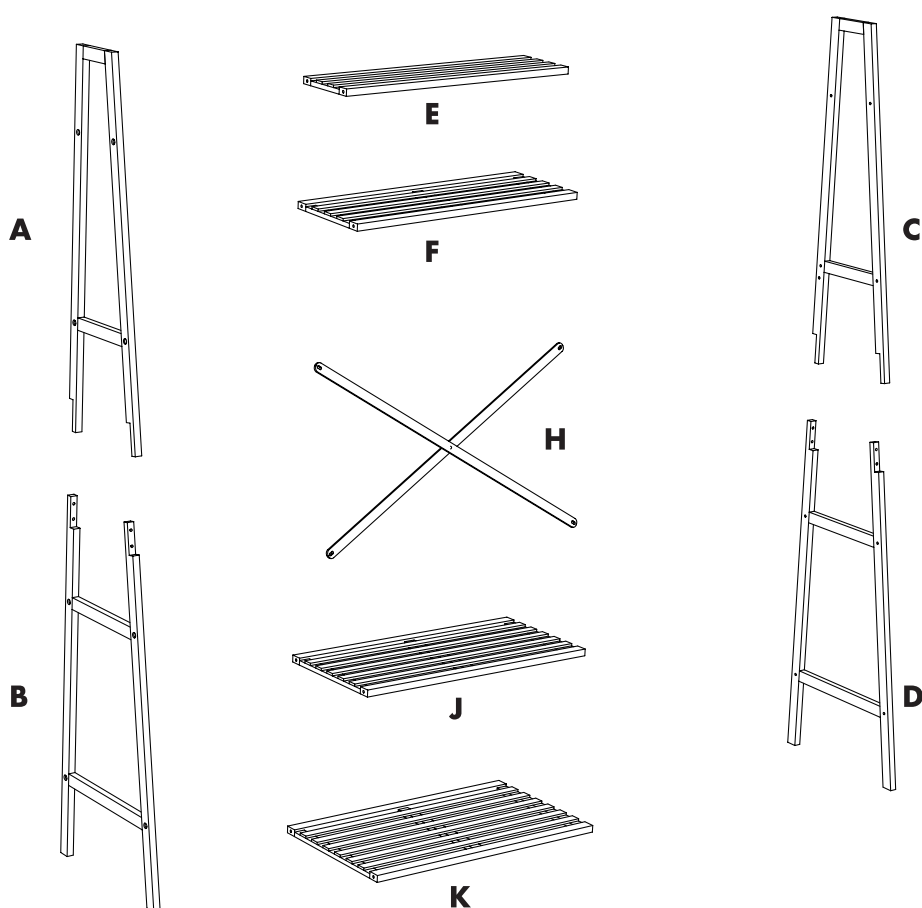


ELEMENTS




HARDWARE

<p>a</p>  <p>x8</p>	<p>b</p>  <p>x16</p>	<p>c</p>  <p>x4</p>	<p>d</p>  <p>x1</p>	<p>e</p>  <p>x5</p>
<p>f</p>  <p>x1</p>	<p>g</p>  <p>x1</p>	<p>h</p>  <p>x1</p>	<p>i</p>  <p>x1</p>	

 
STEP 1

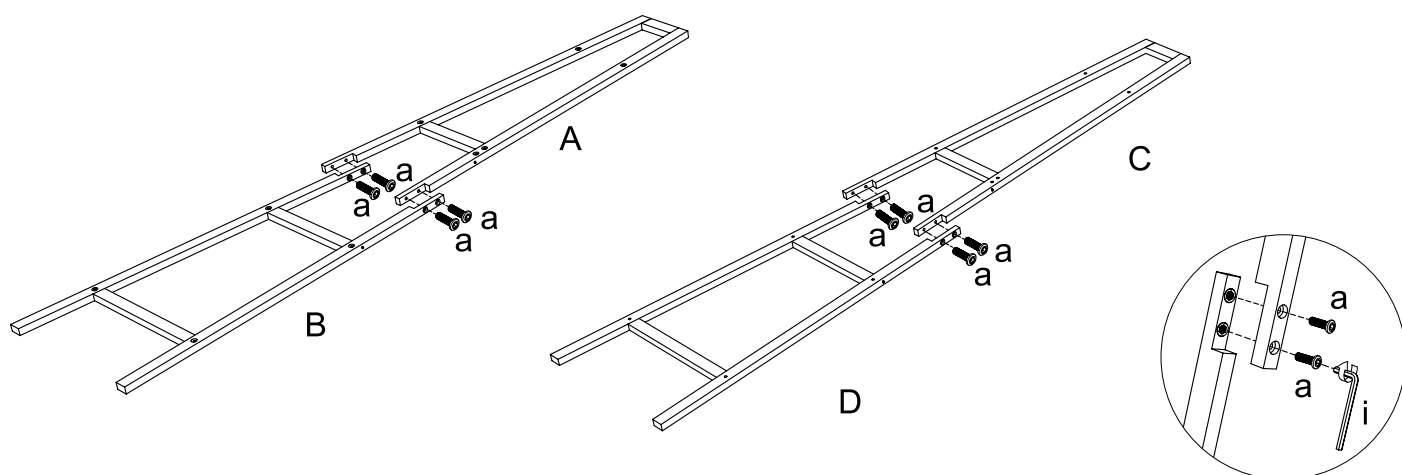

 
STEP 2

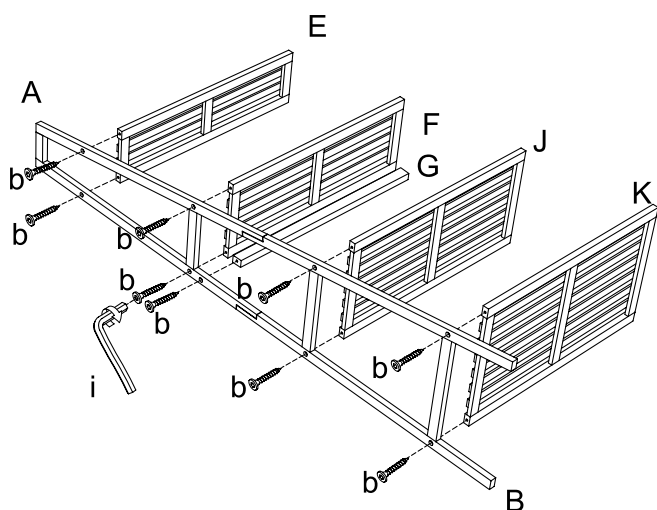

 STEP 3

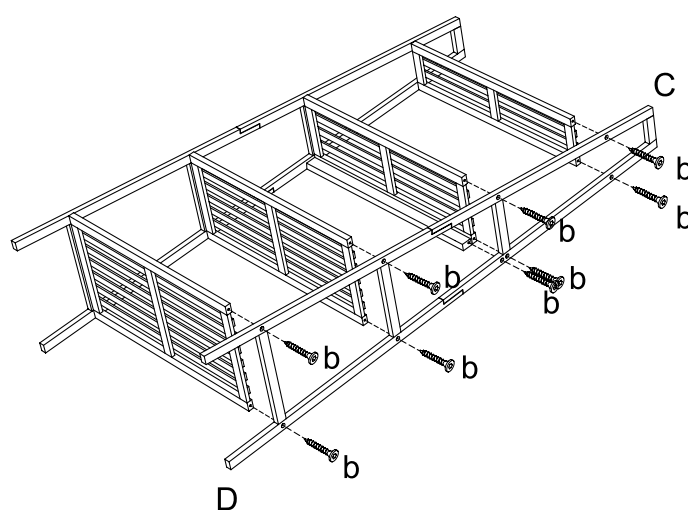


 
STEP 4

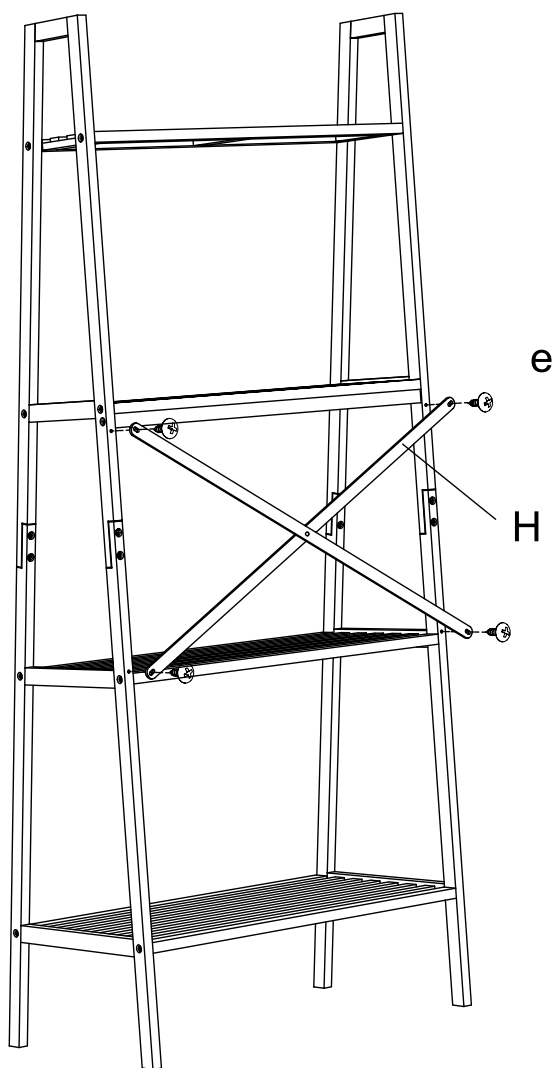



STEP 5



  STEP 6

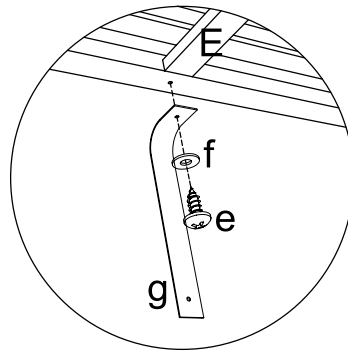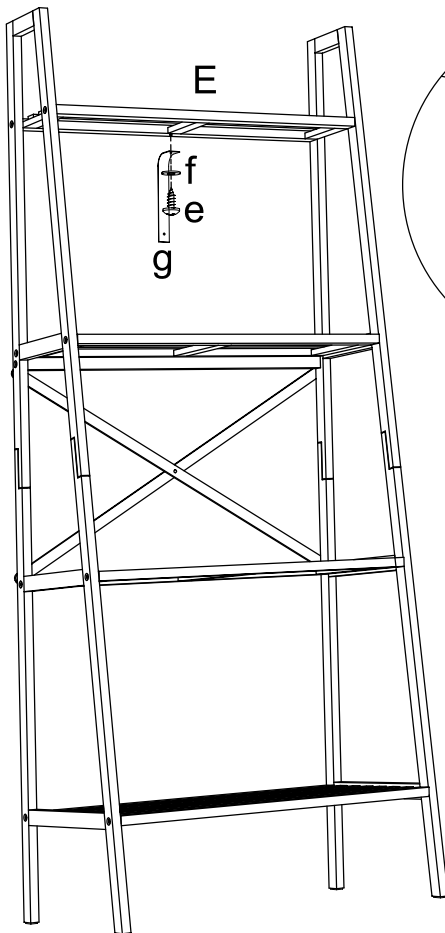


  STEP 7

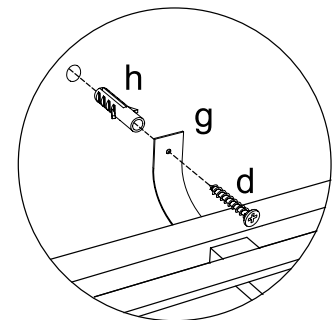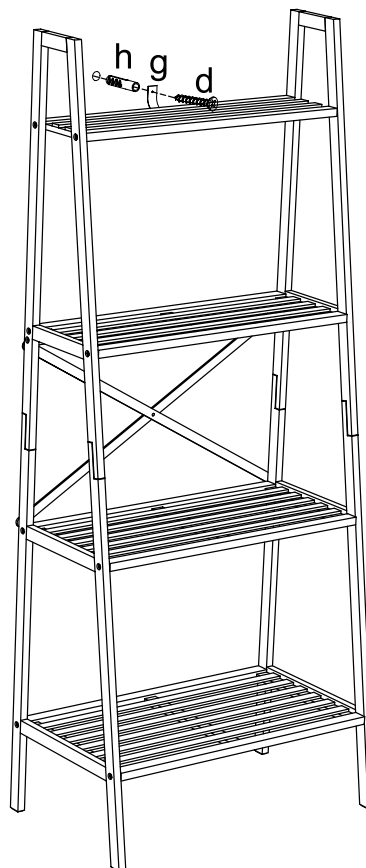

Please note: the wall plug provided (h) is for plasterboard installations only.

 STEP 8

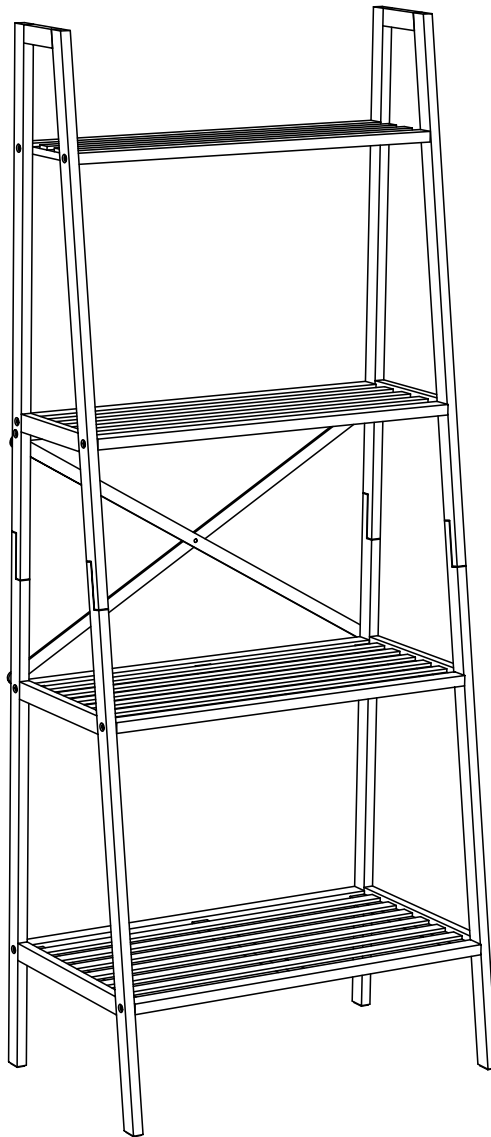

MADE IN CHINA

Distributed by:

Visy Retail Services Pty Ltd (AU): 1300 734 714

Visy Board Limited (NZ): 0800 443 058

flexistorage.com.au

flexistorage.co.nz