


HOMEBASE

2X3 STORAGE CUBE

INSTRUCTION MANUAL



⚠ WARNING

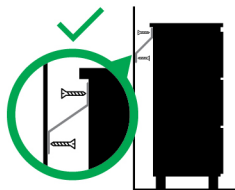

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture















IMPORTANT: Please read these instructions before using the product and retain for future use.


V1_2024

WARNING

- This product should be permanently anchored to the wall or other suitable surface, to avoid serious injury or death.
- To help avoid any serious injury or death, this product includes a bracket to prevent toppling.
- We strongly recommend that this product is permanently fixed to a wall or other suitable surface.
- Fixing hardware is not included since different surface materials require different attachments.
- Please seek professional advice if you are in doubt about which fixing hardware to use.
- Regularly check your fixing device.


(A)  Screws x 4	(B)  Allen key x 1	(C)  Wooden dowels x 20	(D)  Male camlocks x 12
(E)  Female camlocks x 12	(F)  Plastic covers x 8	(G)  Foot pads x 5	(H)  Screws x 12
(I)  Wooden dowels x 4	(J)  Wall brackets x 2	(K)  Screws x 2	(L)  Cover stickers x 12

PANELS

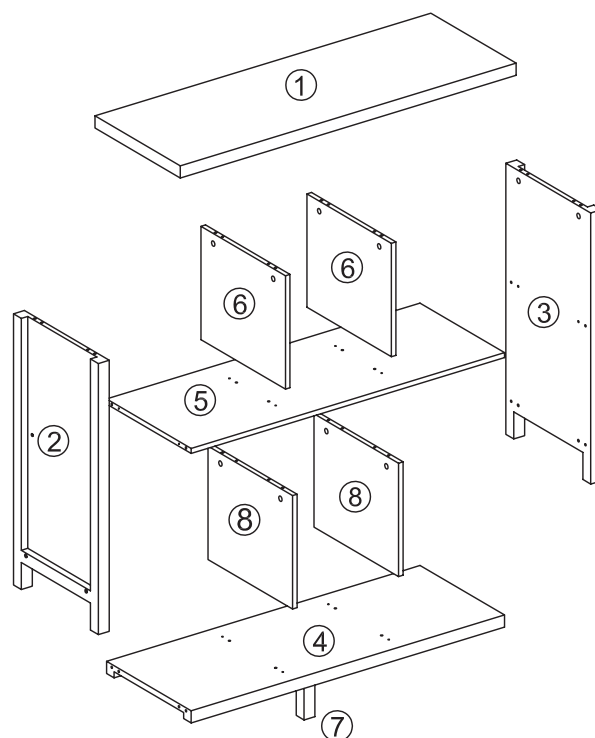


STEP 1

Connect 2 x panels (6) to middle panel (5) using 4 x wooden dowels (I). Secure with 4 x screws (H).

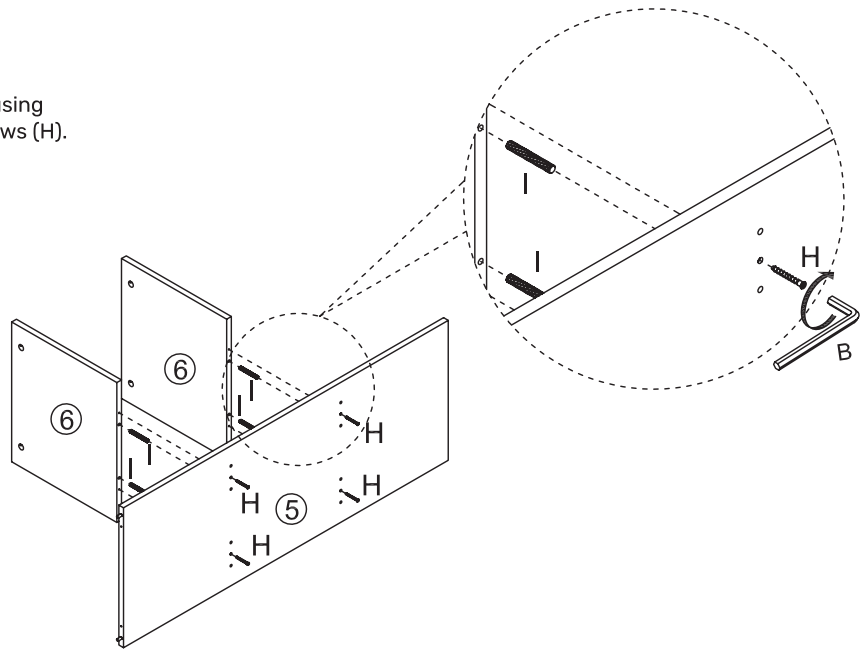


STEP 2

Insert 4 x male camlocks (D) into middle panel (5).

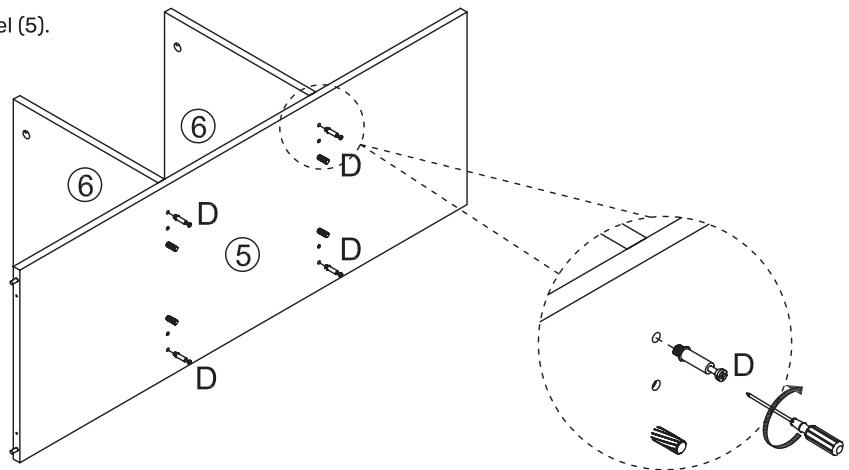


STEP 3

Connect remaining 2 x panels (8) to the partially assembled unit and secure with 4 x female camlocks (E).

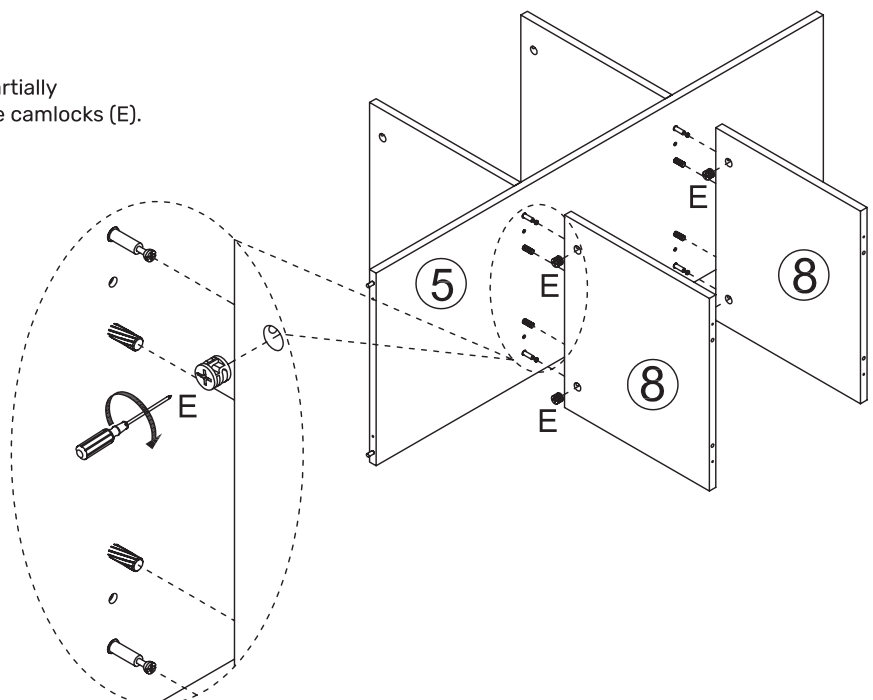


STEP 4

Connect bottom panel (4) to the partially assembled unit using 4 x wooden dowels (C).
Secure with 4 x screws (H).

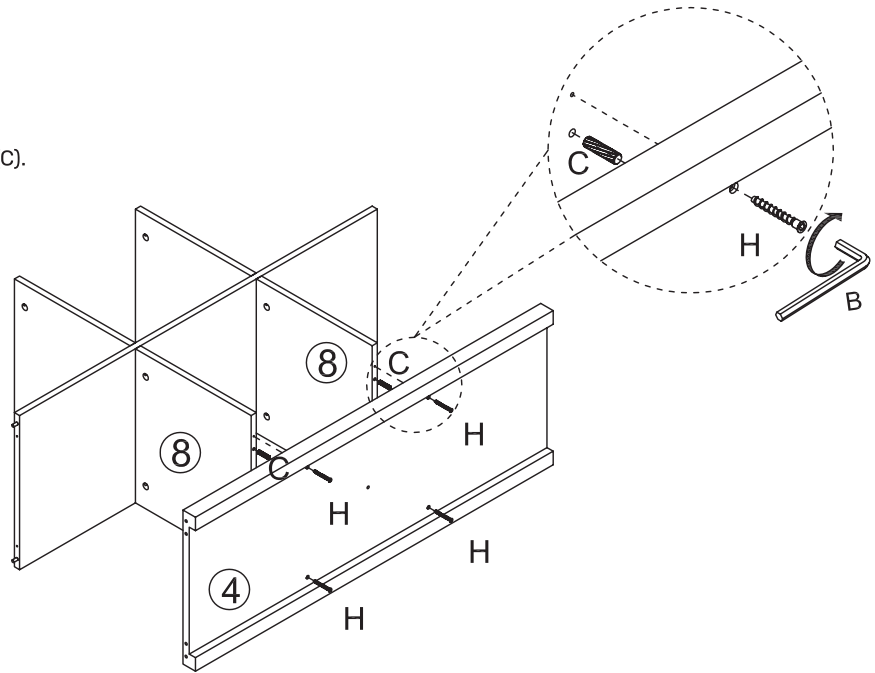


STEP 5

Screw the support foot (7) into the bottom panel (4).

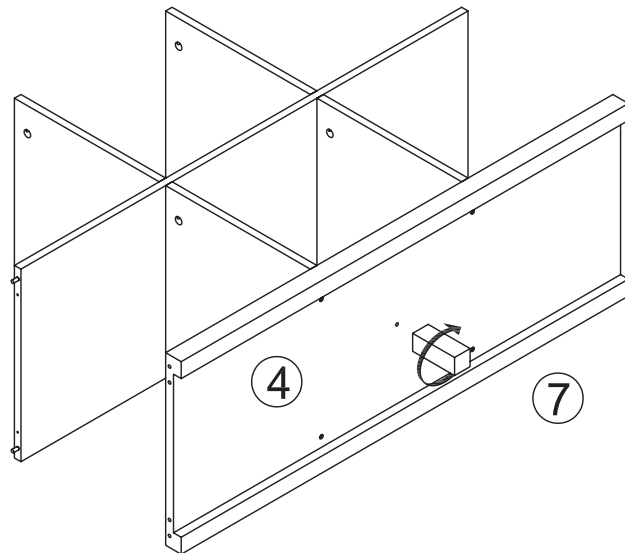


STEP 6

Attach side panels (2 & 3) to the partially assembled unit using 8 x wooden dowels (C).
Secure with 4 x screws (A) and 4 x screws (H).

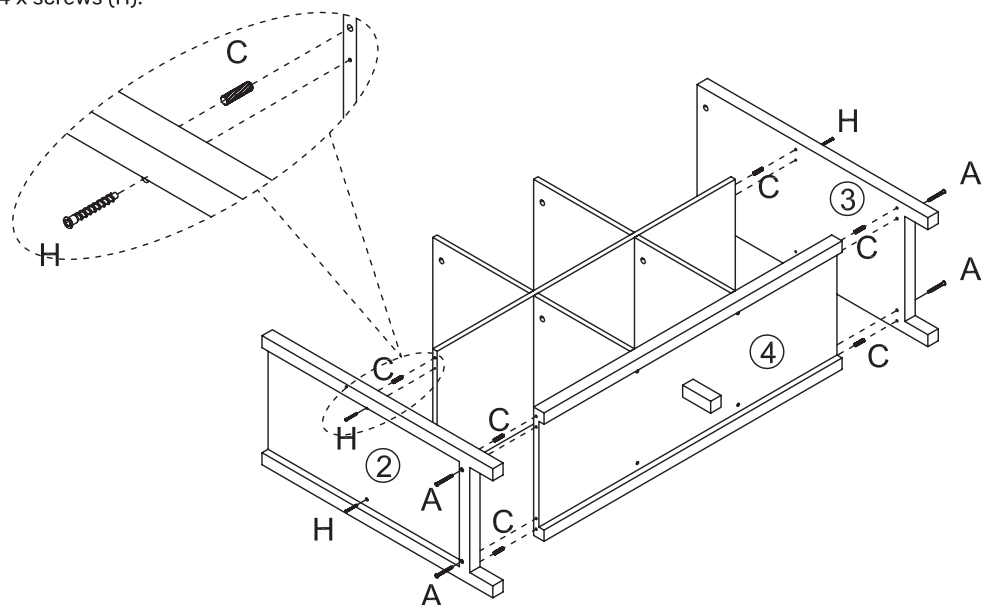


STEP 7

1. Secure 2 x wall brackets (J) to top panel (1) with 2 x screws (K).
2. Insert 8 x male camlocks (D) into top panel (1).

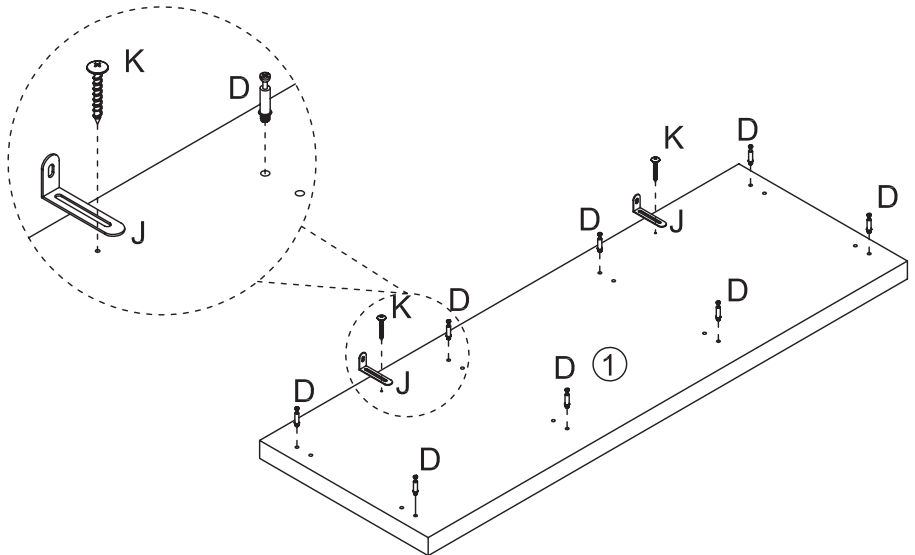


STEP 8

Connect top panel (1) to the partially assembled unit using 8 x wooden dowels (C). Secure with 8 x female camlocks (E).

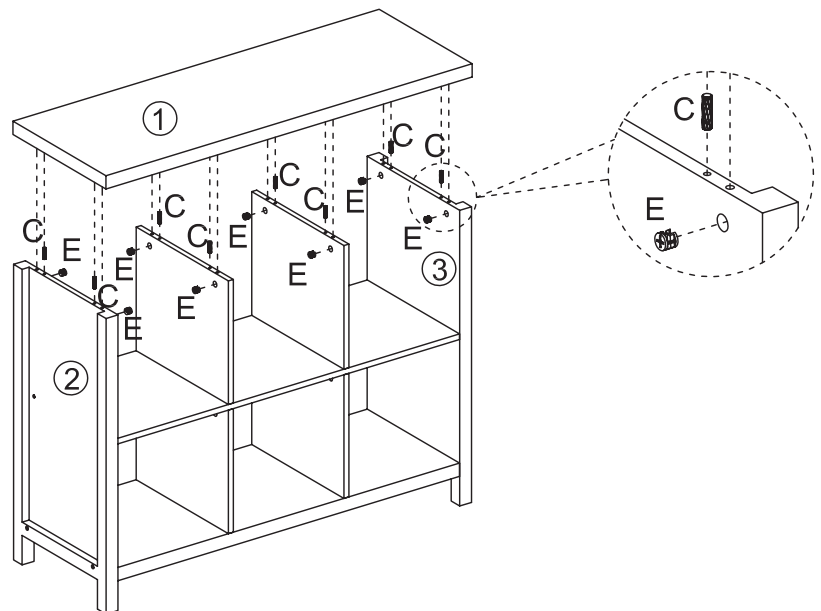


STEP 9

Hammer 5 x foot pads (G) into the bottom of the unit legs.

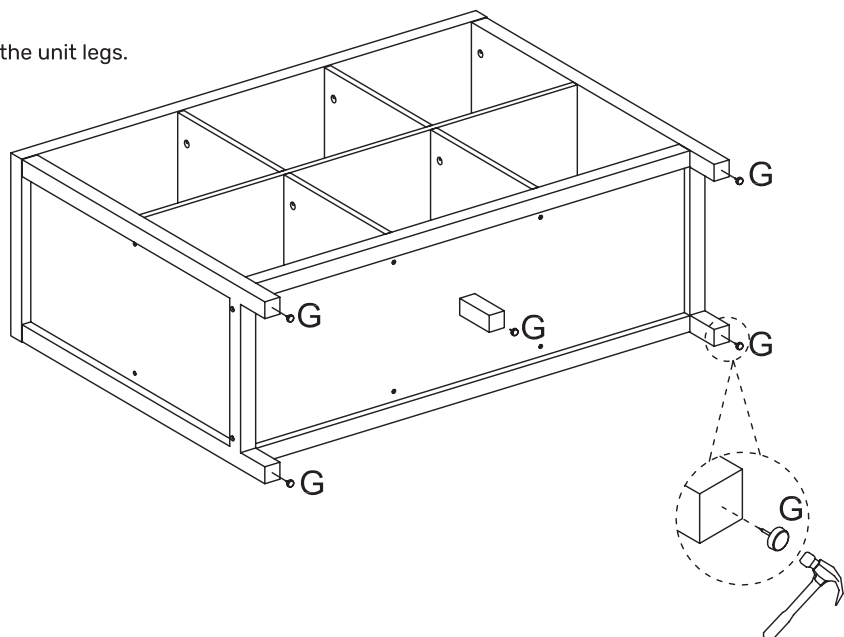


STEP 10

Cover all screw holes with 8 x plastic covers (F) and 12 x cover stickers (L).

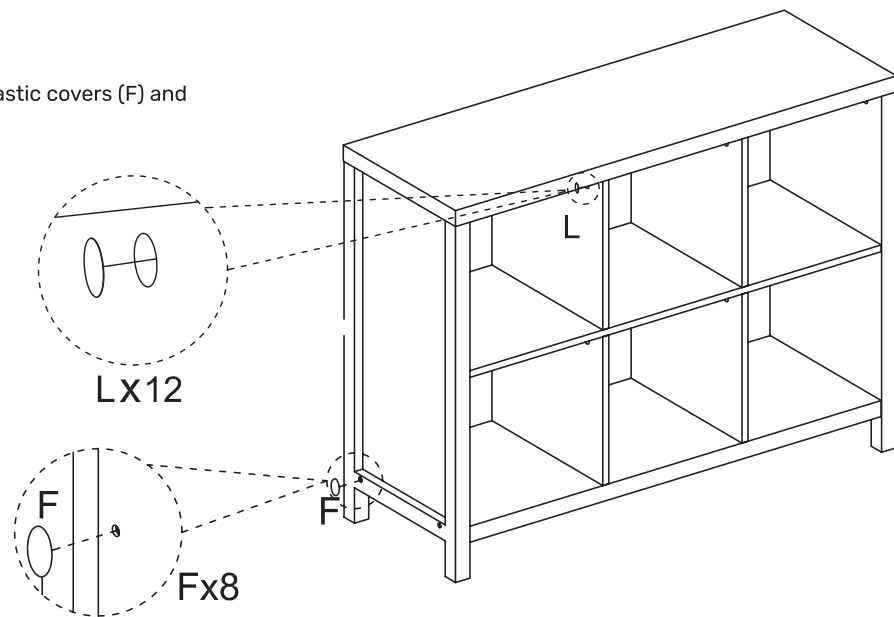

STEP 11

Secure the unit to the wall with 2 x screws (not supplied) and 2 x wall brackets (J).

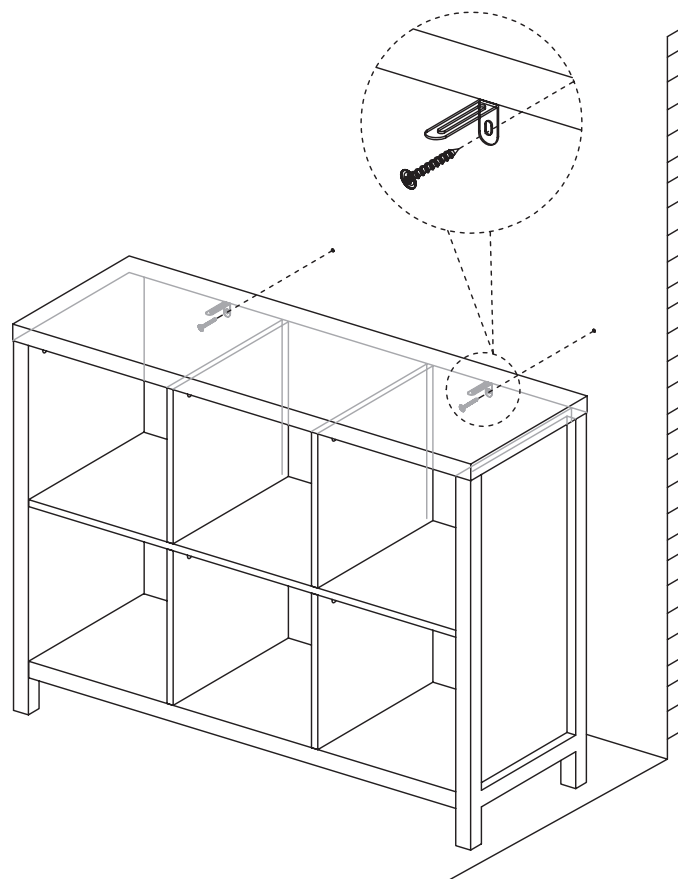

ASSEMBLY COMPLETE