


HOMEBASE

BEVELLED TOY CHEST

INSTRUCTION MANUAL



⚠ WARNING

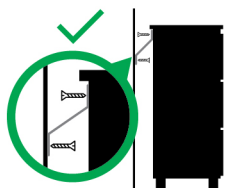

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture




IMPORTANT: Please read these instructions before using the product and retain for future use.

SAFETY & CARE ADVICE




Please read these instructions fully before starting assembly and retain for future reference.

- This product is not a toy
- This product is suitable for children 3+ years
- Check you have all the components and tools listed before you start assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area; small parts could pose a choking hazard if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the component parts or the product, as this could cause damage.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drills/drivers for inserting screws during assembly, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Domestic use only.
- Ensure that hands and fingers are clear when closing the lid
- Maximum weight loading per compartment is 7.5kg (evenly distributed).

COMPONENTS

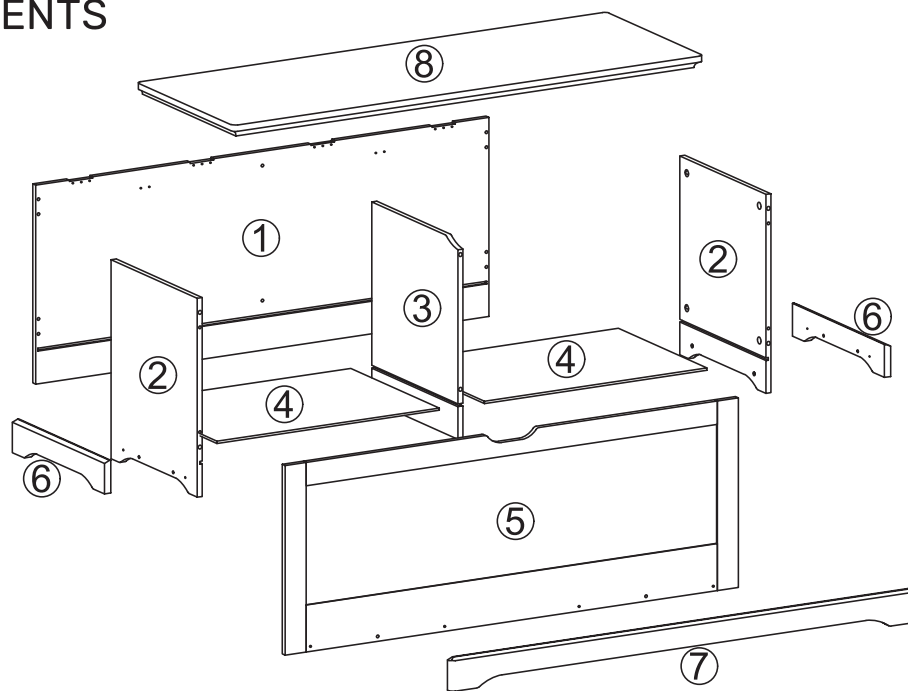


FITTINGS

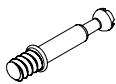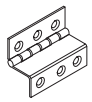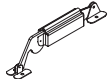(A)  Male camlocks x 12	(B)  Female camlocks x 12	(C)  Dowels x 8	(D)  Screws x 8
(E)  Dowels x 6	(F)  Screws x 24	(G)  Screws x 8	(H)  Hinges x 4
(I)  Hinges x 2			

ASSEMBLY INSTRUCTIONS


Step 1

- a. Attach hinges (H & I) to lid (8) using screws (F & G).
- b. Insert 12 x male camlocks (A) into front and back panels (1 & 5).

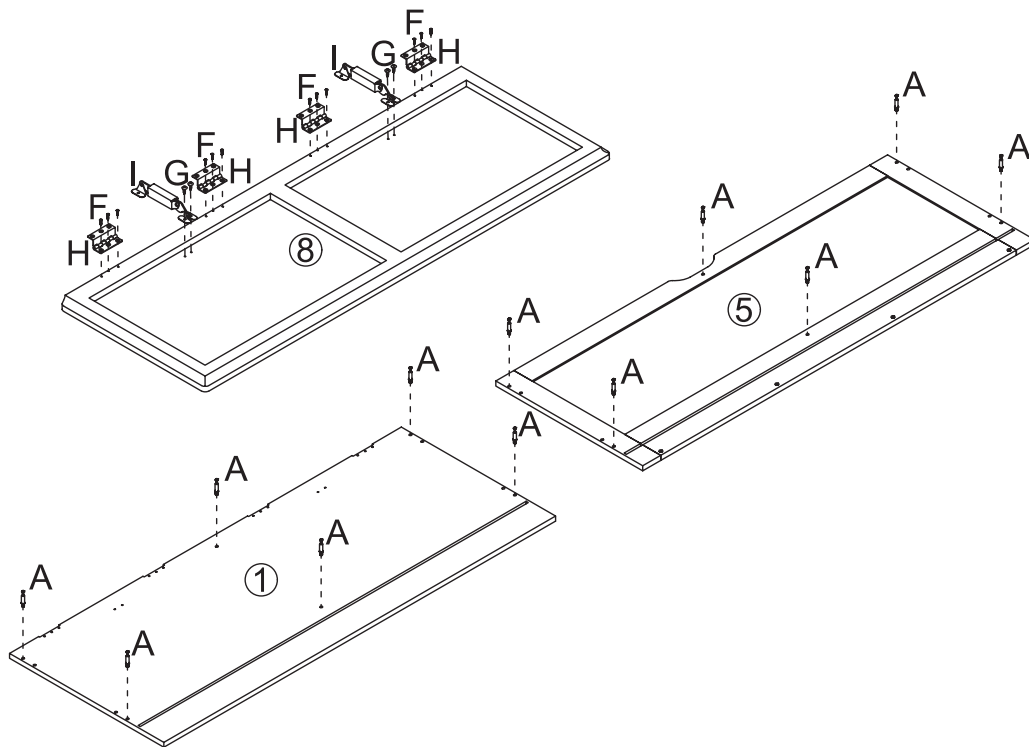


Step 2

- Attach 2 x side panels (2) and middle panel (3) to back panel (1) using 4 x wooden dowels (C).
Secure with 6 x female camlocks (B).

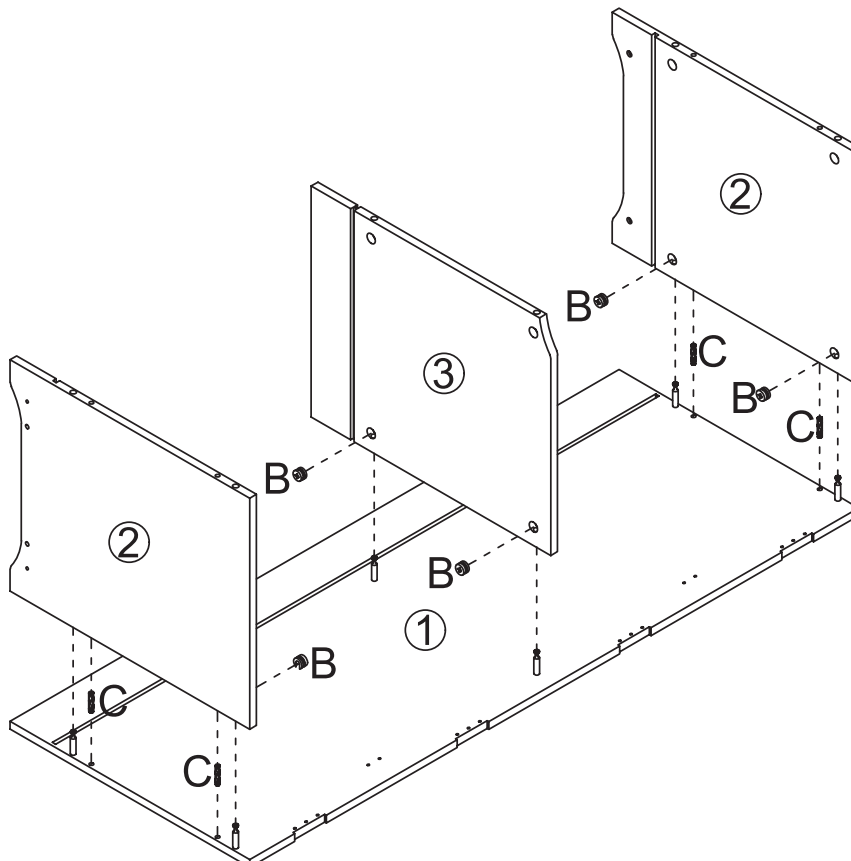


Step 3

Insert 2 x base panels (4) into the slots of the partially assembled unit.

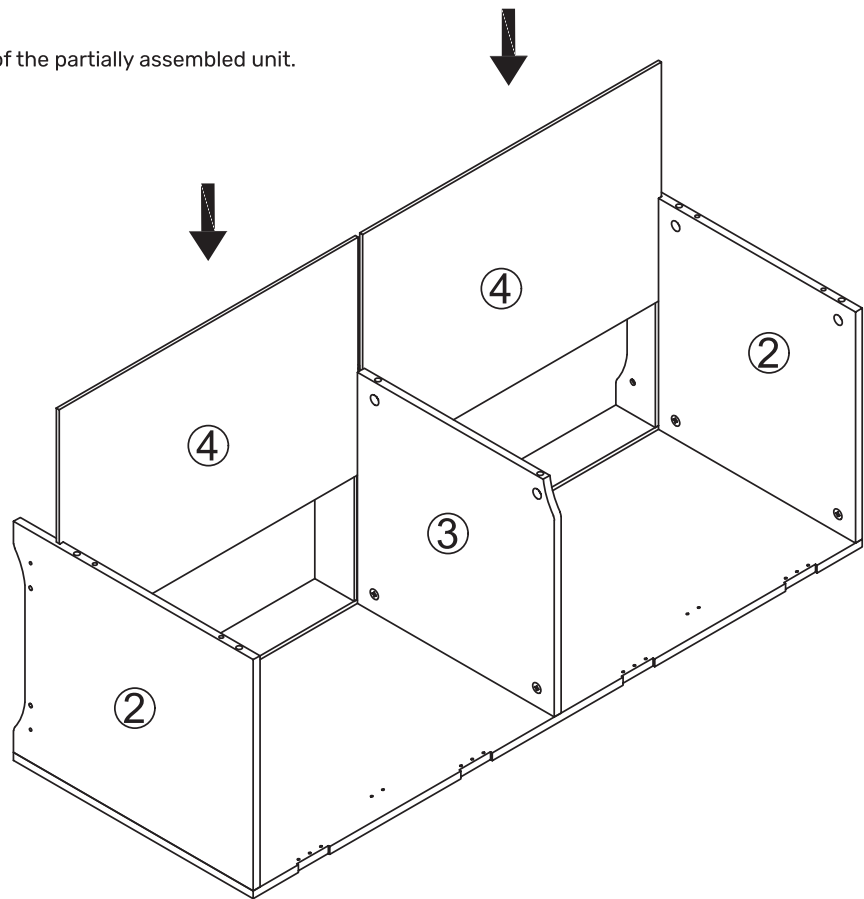


Step 4

Attach front panel (5) to the partially assembled unit using 4 x wooden dowels (C).
Secure with 6 x female camlocks (B).

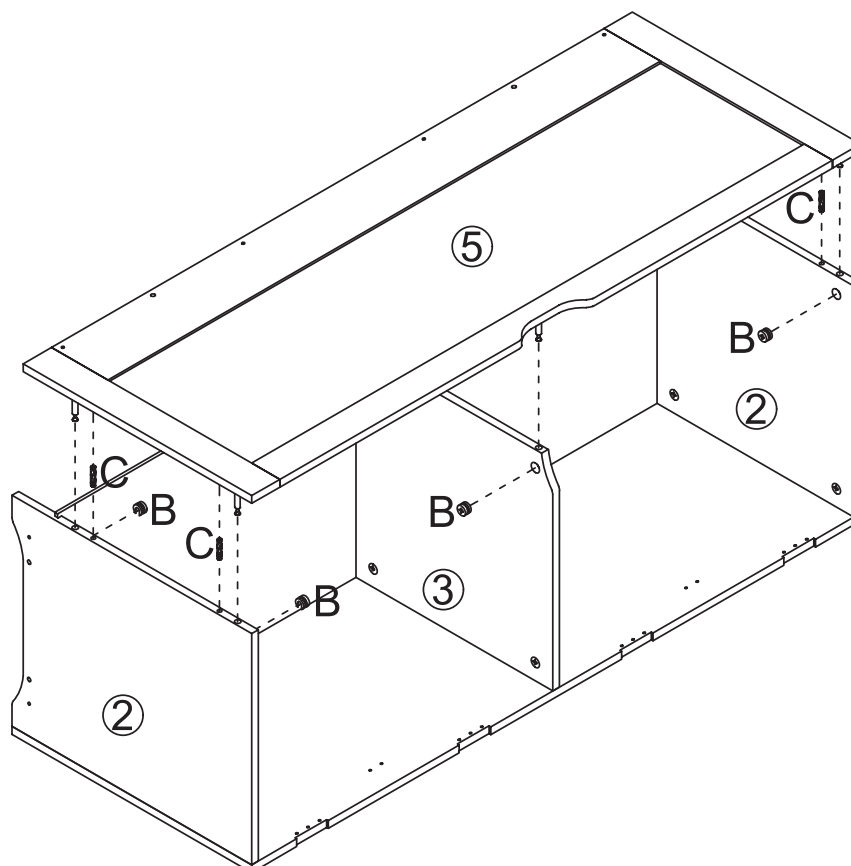


Step 5

Attach front and side panels (6 & 7) to the unit using 6 x wooden dowels (E).
Secure with 8 x screws (D).

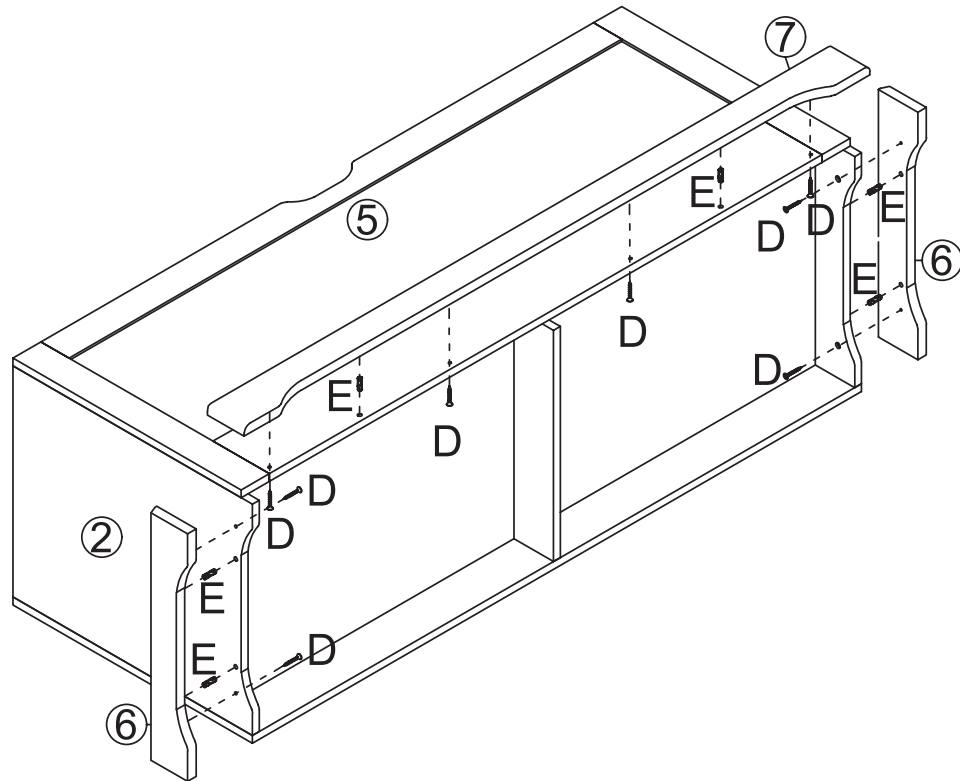

Step 6

Secure the lid hinges to the unit using screws (F & G).

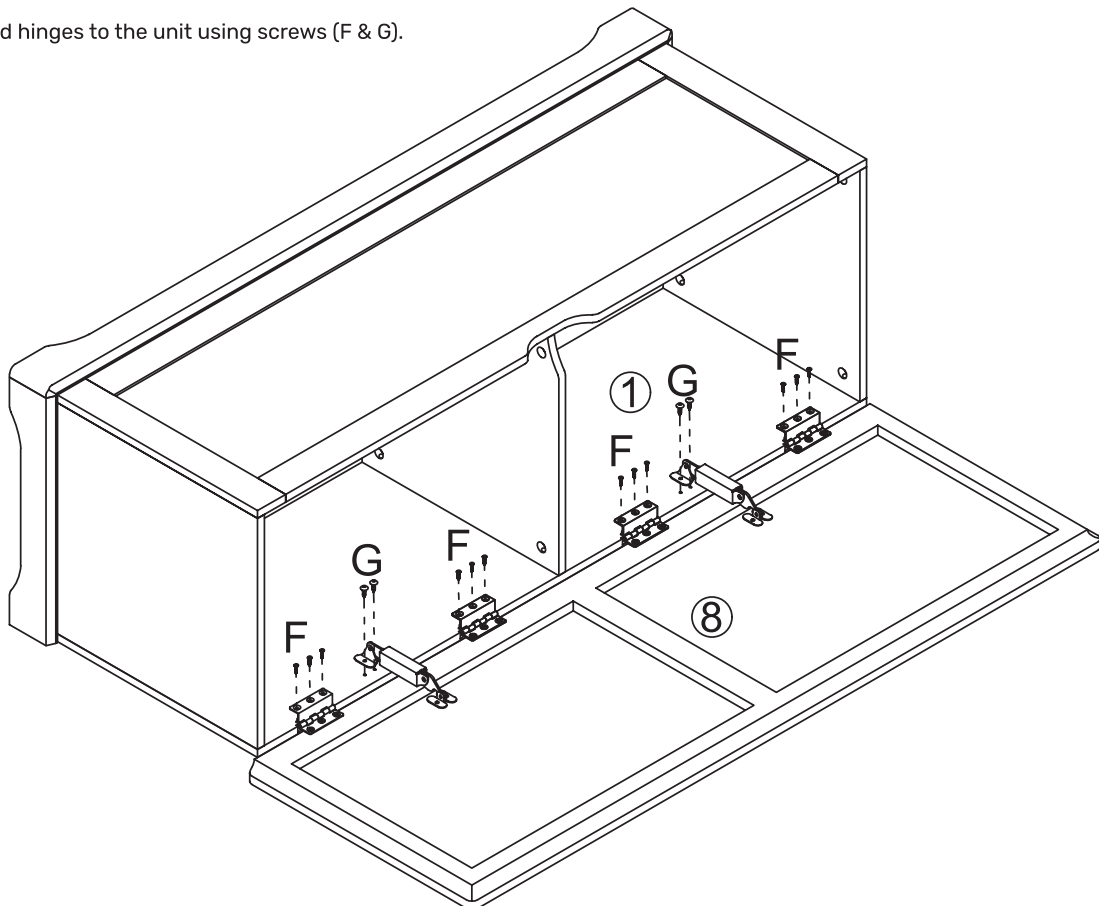

ASSEMBLY COMPLETE