


# HOMEBASE

## 2X2 COMPACT STORAGE CUBE

### INSTRUCTION MANUAL



#### ⚠ WARNING

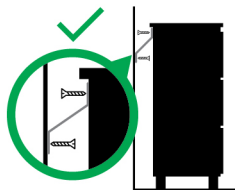

#### Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV  
on this furniture



IMPORTANT: Please read these instructions before  
using the product and retain for future use.


V1\_2024

# SAFETY & CARE ADVICE









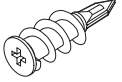


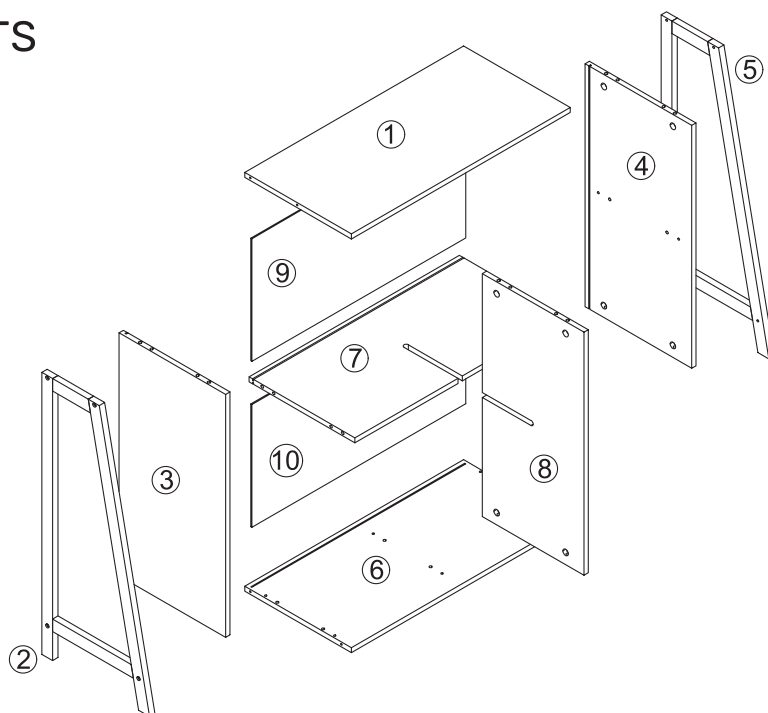
Please read these instructions fully before starting assembly and retain for future reference.

- Check you have all the components and tools listed before you start assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area; small parts could pose a choking hazard if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the component parts or the product, as this could cause damage.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drills/drivers for inserting screws during assembly, as this could damage the unit.  
Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Domestic use only.
- Maximum loading weight per compartment is 5kg (evenly distributed).
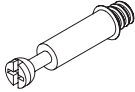
## COMPONENTS

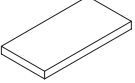

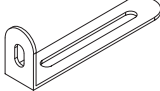
## FITTINGS

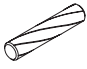(A)  Male camlocks x 16	(B)  Female camlocks x 16	(C)  Screws x 9	(D)  Foot pads x 4
(E)  Cover stickers x 12	(F)  Screw x 1	(G)  Wall bracket x 1	(H)  Masonry wall plug x 1
(I)  Plasterboard wall plug x 1	(J)  Corner brackets x 8	(K)  Screws x 8	(L)  Dowels x 16

# ASSEMBLY INSTRUCTIONS


## Step 1

- a. Secure wall bracket (G) to top panel (1) with screw (F).
- b. Insert 16 x male camlocks into panels (1,3, 4 & 6).

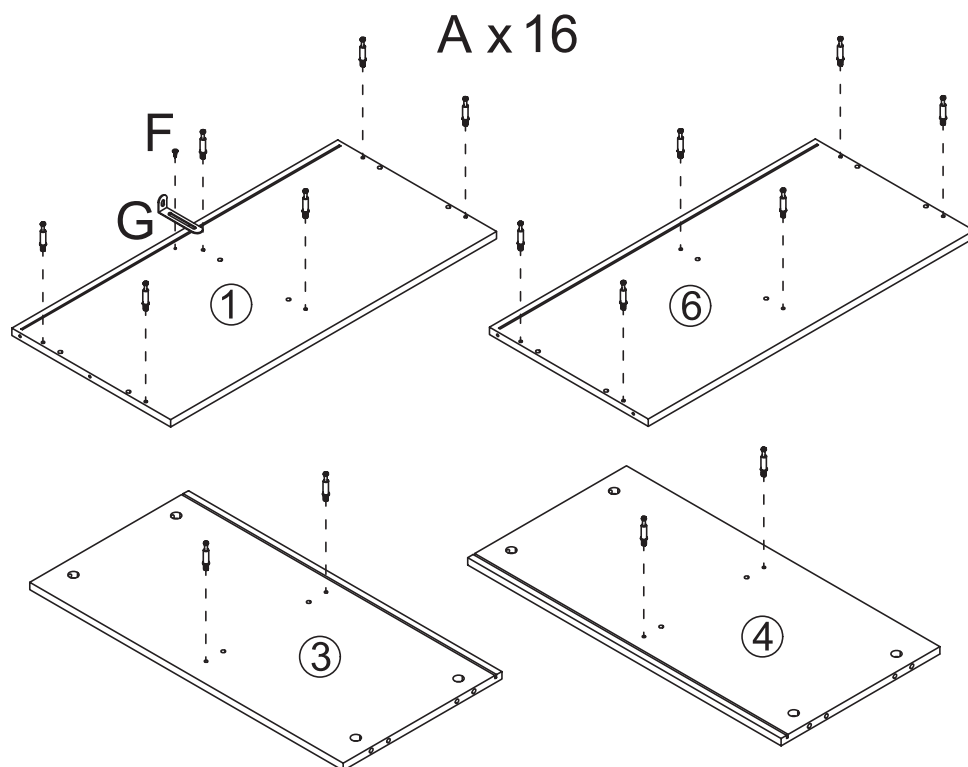


## Step 2

Connect panels (7 & 8) together.

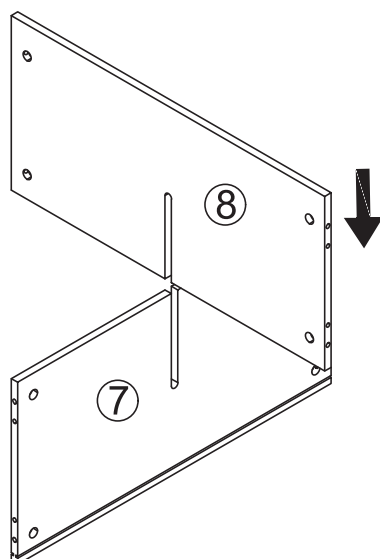


### Step 3

Attach side panels (3 & 4) to the partially assembled units using 4 x wooden dowels (L).  
Secure with 4 x female camlocks (B).

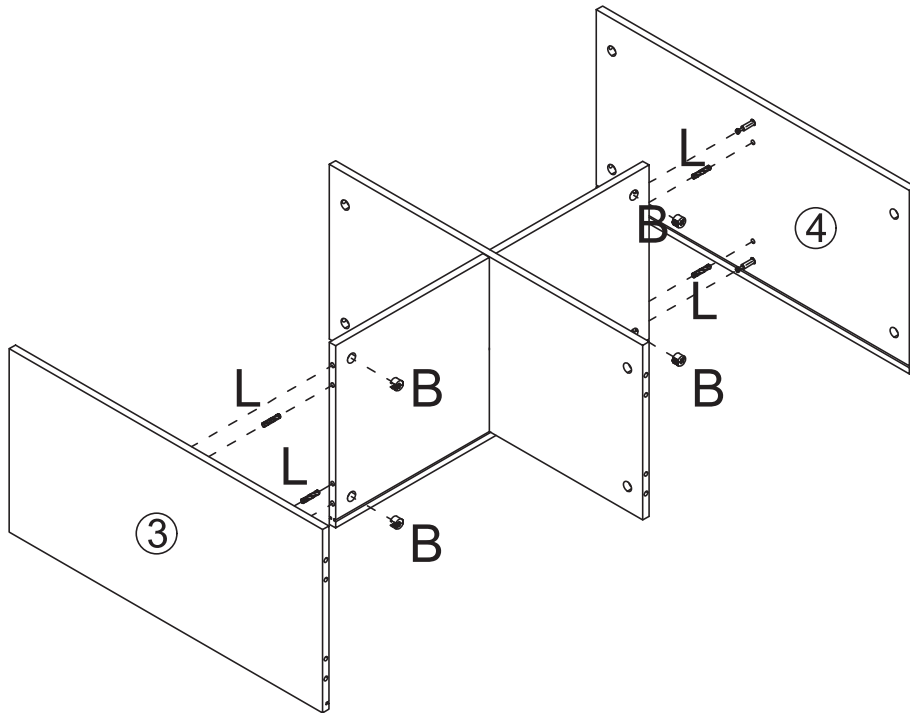


### Step 4

Insert back panels (9 & 10) into the slots of the unit.

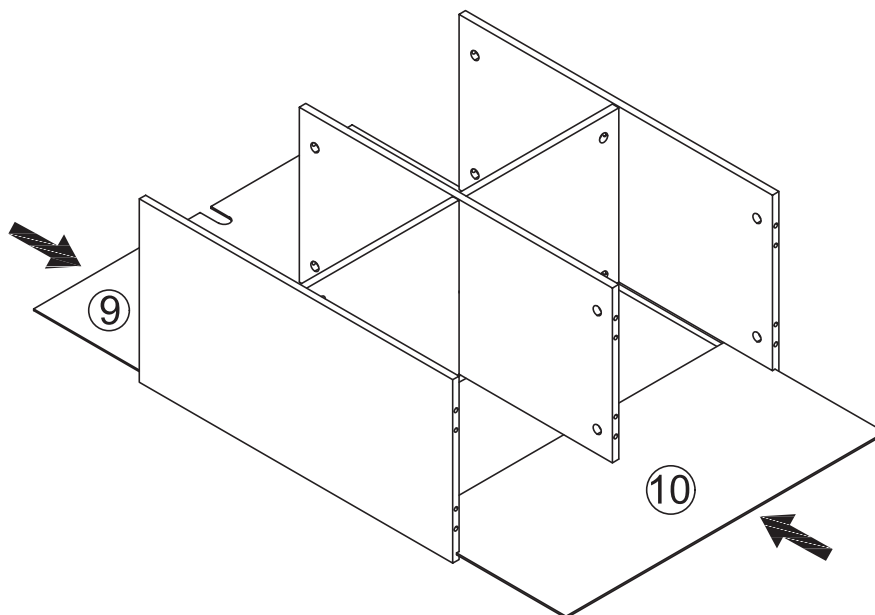


## Step 5

- a. Attach top panel (1) to the unit using 6 x wooden dowels (L). Secure with 6 x female camlocks (B).
- b. Repeat with base panel (6).

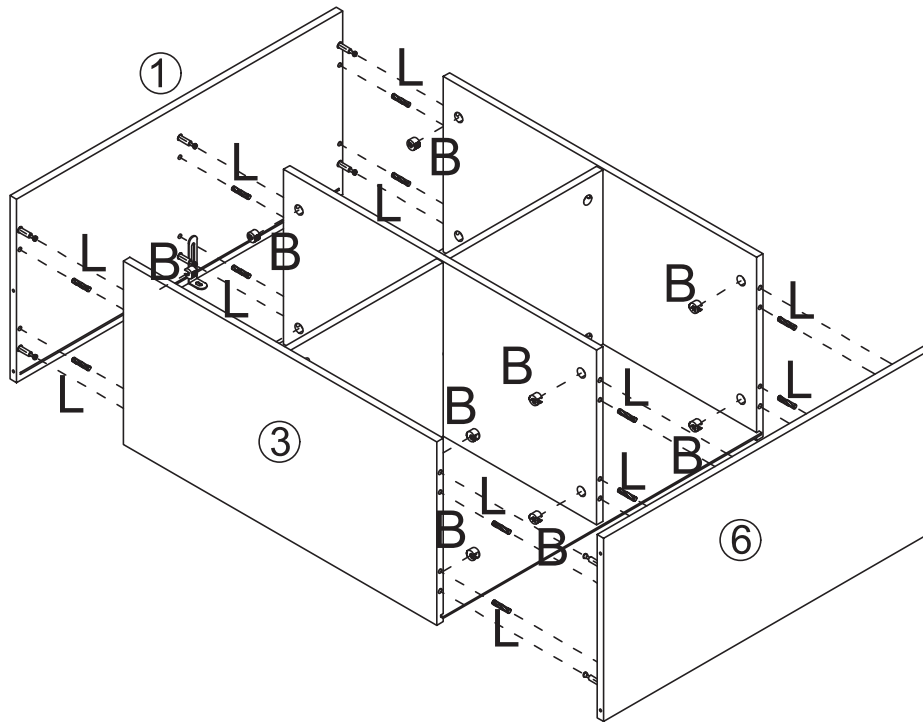


## Step 6

- a. Attach 2 x frame legs (2 & 5) to the unit using 8 x screws (C).
- b. Stick 4 x feet pads (D) to the bottom of the frame legs.

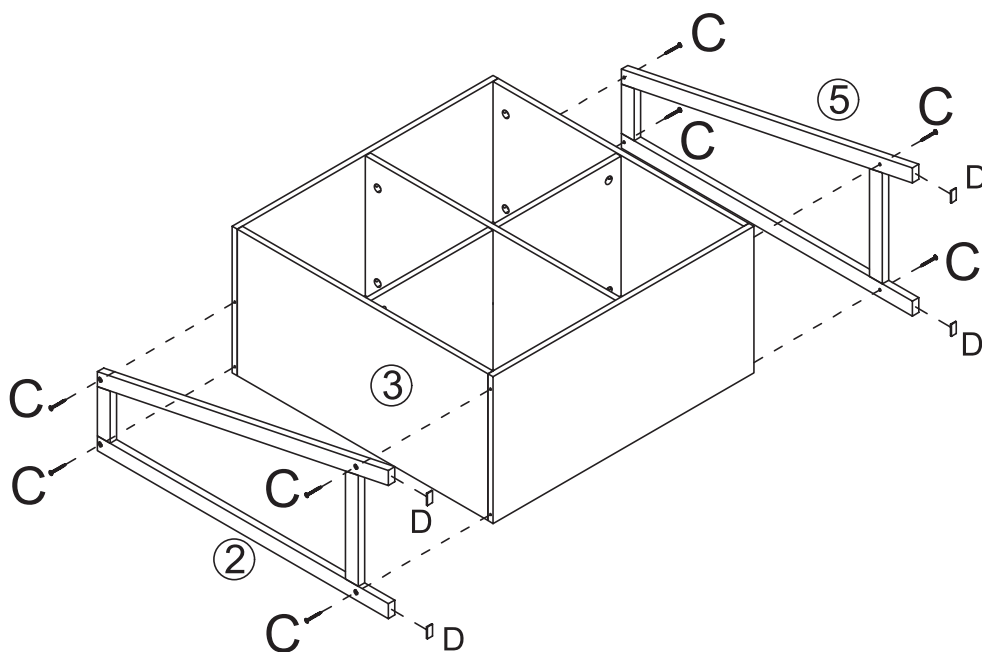

## Step 7


- Ensure your unit is square by measuring from corner to corner.
- Secure the back panel by placing 8 x corner brackets (J) on the back of the unit and securing with 8 x screws (K).

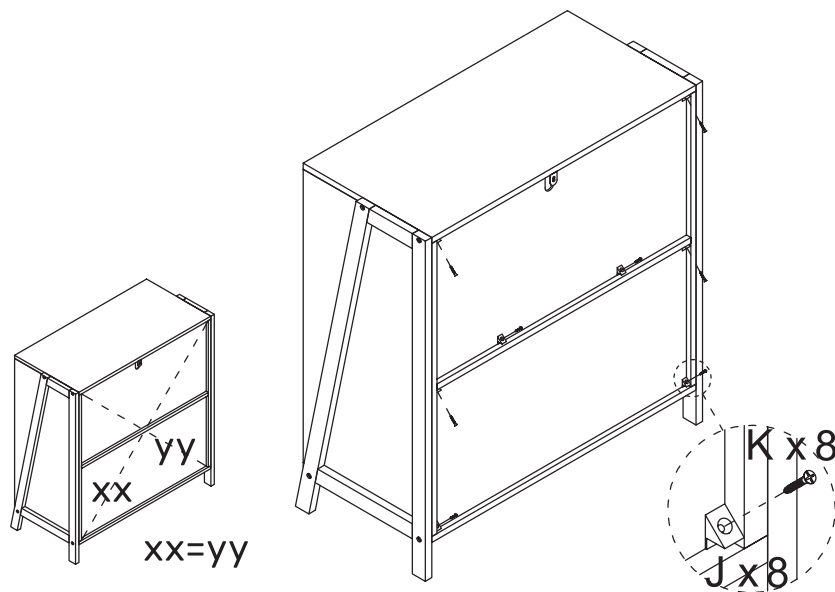

## INSTALLATION INSTRUCTIONS

### Step 1

- Mark a bracket hole onto the wall using a pencil.
- Using a 5mm drill bit, drill a hole in the wall using your marking in step 1.a.
- Insert the plasterboard (I) or masonry plug (H) depending on your wall surface.
- Secure your unit to the wall using screw (C).
- Cover screw holes using 12 x cover stickers (E).

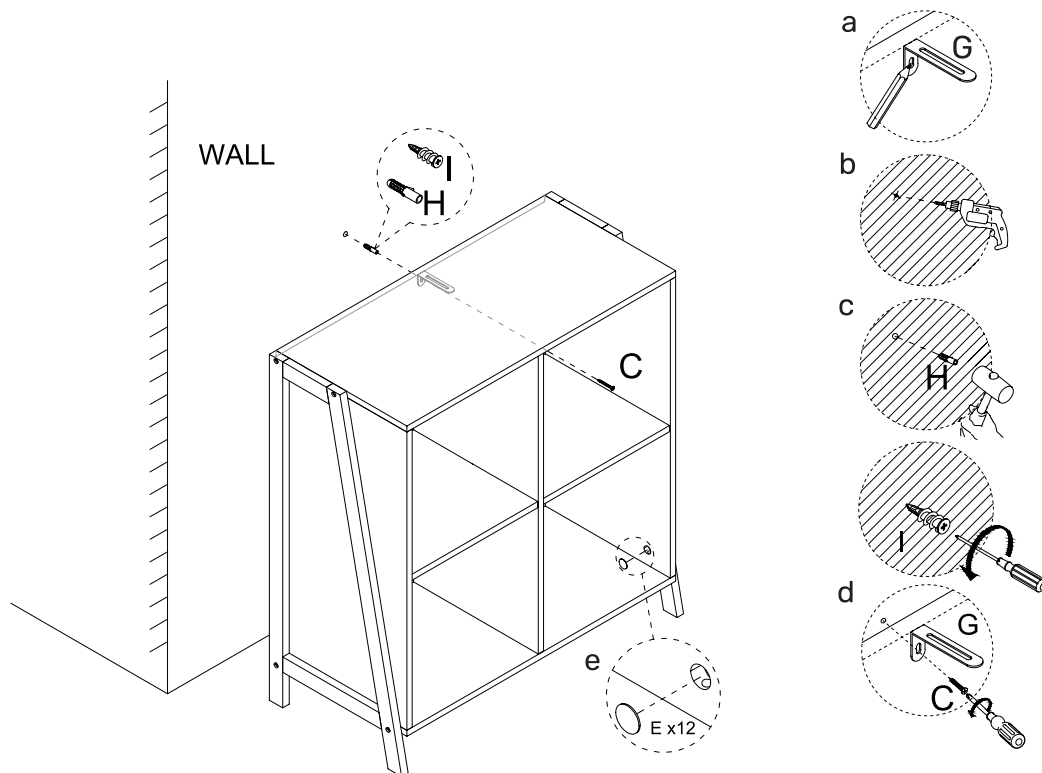

**ASSEMBLY COMPLETE**