


HOMEBASE

3 TIER STORAGE UNIT

INSTRUCTION MANUAL



⚠ WARNING

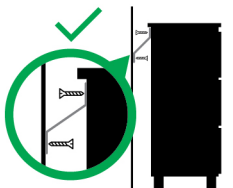

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture



IMPORTANT: Please read these instructions before using the product and retain for future use.


V1_2024

SAFETY & CARE ADVICE










Please read these instructions fully before starting assembly and retain for future reference.

- Check you have all the components and tools listed before you start assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area; small parts could pose a choking hazard if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the component parts or the product, as this could cause damage.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drills/drivers for inserting screws during assembly, as this could damage the unit.
- Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Domestic use only.
- Maximum loading weight per shelf is 3kg (evenly distributed).

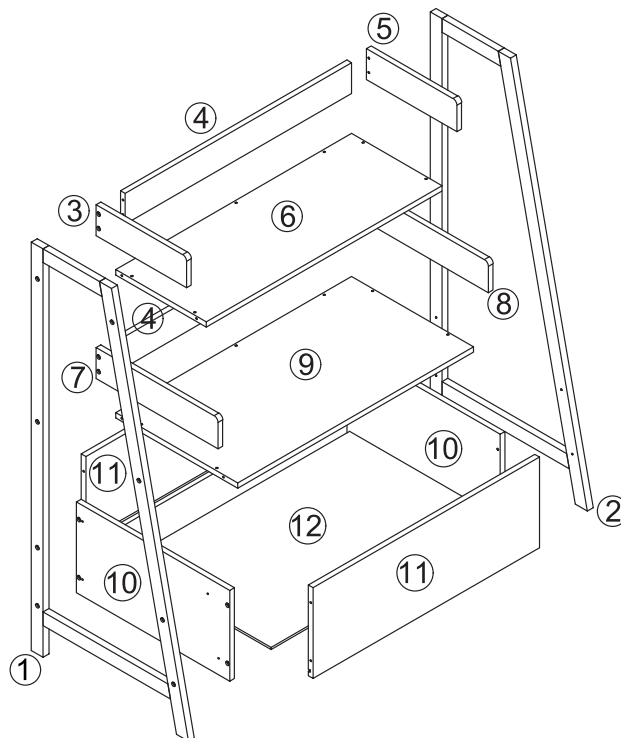COMPONENTS




FITTINGS

<p>(A)</p>  <p>Screws x 8</p>	<p>(B)</p>  <p>Screws x 30</p>	<p>(C)</p>  <p>Screws x 9</p>	<p>(D)</p>  <p>Foot pads x 4</p>
<p>(E)</p>  <p>Cover stickers x 4</p>	<p>(F)</p>  <p>Screw x 1</p>	<p>(G)</p>  <p>Wall bracket x 1</p>	<p>(H)</p>  <p>Masonry wall plug x 1</p>
<p>(I)</p>  <p>Plasterboard wall plug x 1</p>			

ASSEMBLY INSTRUCTIONS


Step 1

- a. Secure panels (3 & 5) to panel (4) using 4 x screws (B).
- b. Secure panels (7 & 8) to panel (4) using 4 x screws (B).
- c. Secure 2 x panels (11) to panel (10) using 4 x screws (B).

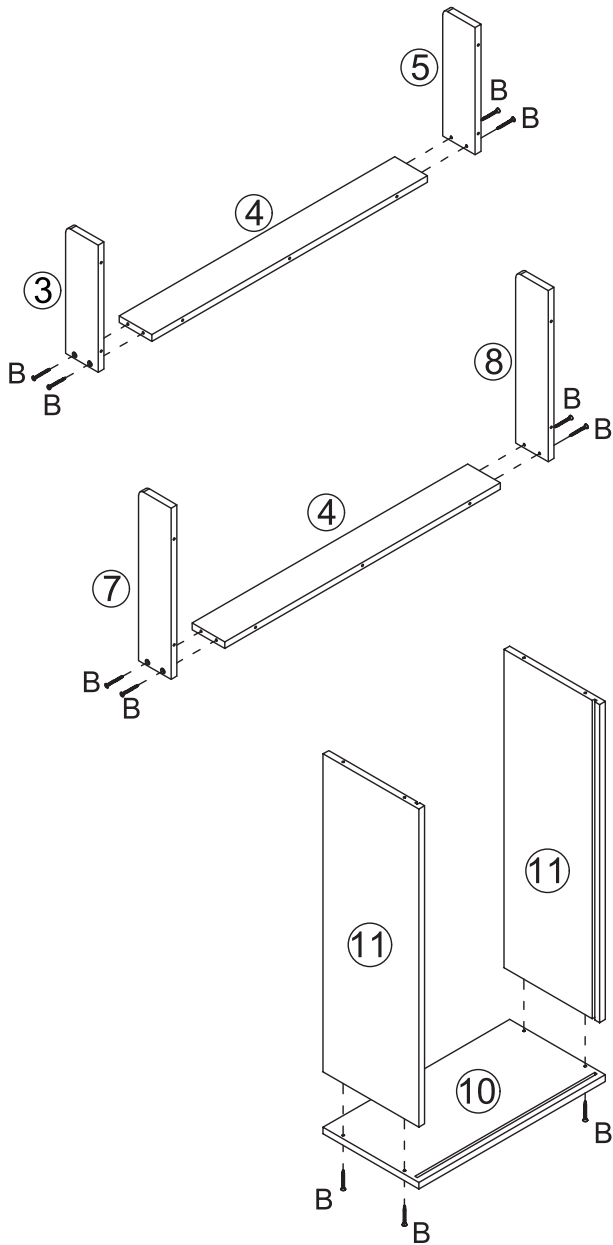



Step 2

- a. Secure panel (6) to panels (3, 4 & 5) using 7 x screws (B).
- b. Secure panel (9) to panels (4, 7 & 8) using 7 x screws (B).
- c. Insert base panel (12) into the slots of panels (10 & 11).

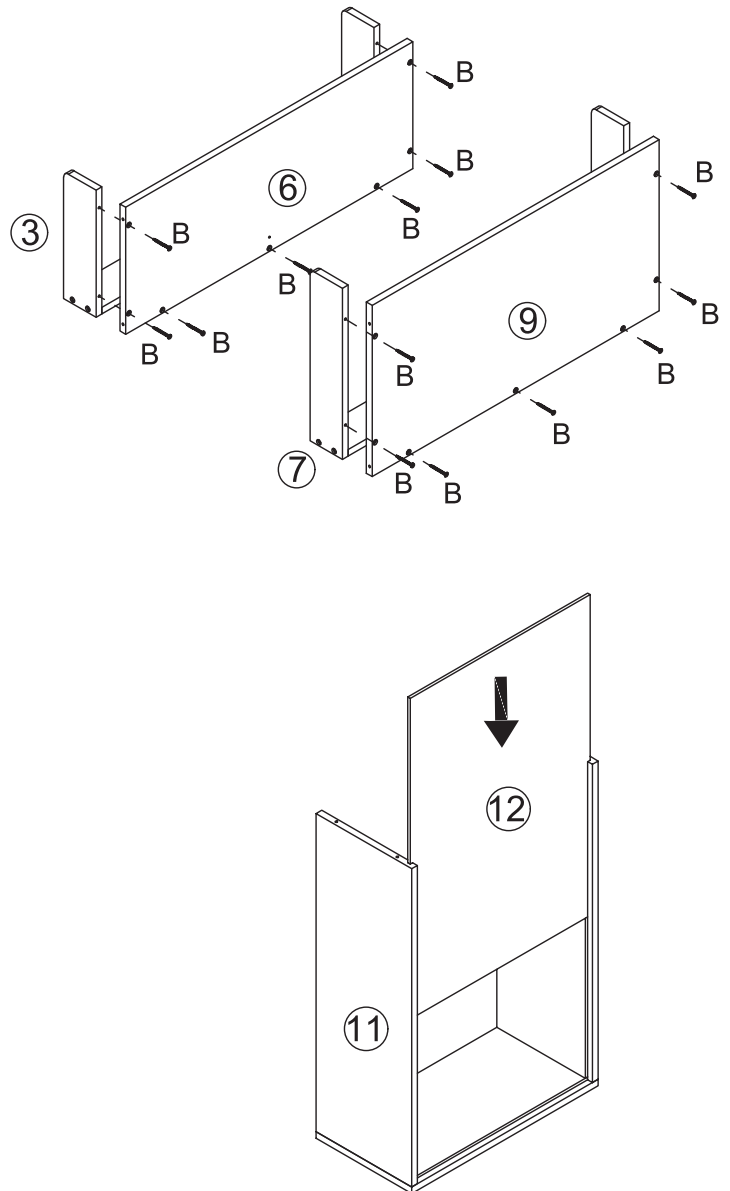


Step 3

- Secure wall bracket (G) to panel (6) with screw (F).
- Attach panel (10) to the partially assembled bottom shelf using 4 x screws (B).

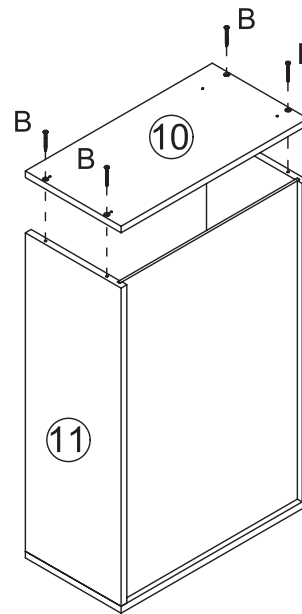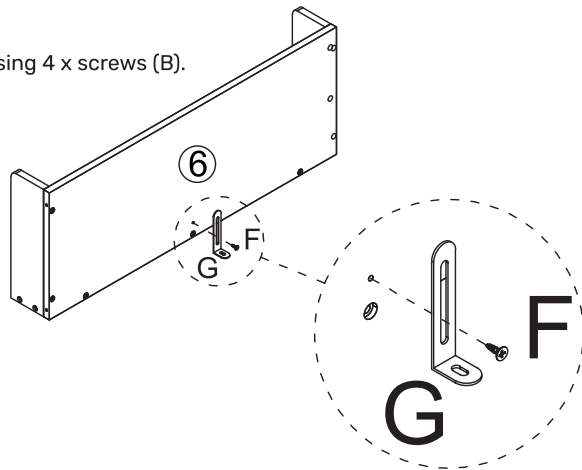

Step 4



- Attach 2 x frame legs (1 & 2) to the 3 shelves using 8 x screws (C) and 8 x screws (A).
- Stick 4 x feet pads (D) to the bottom of the frame legs.

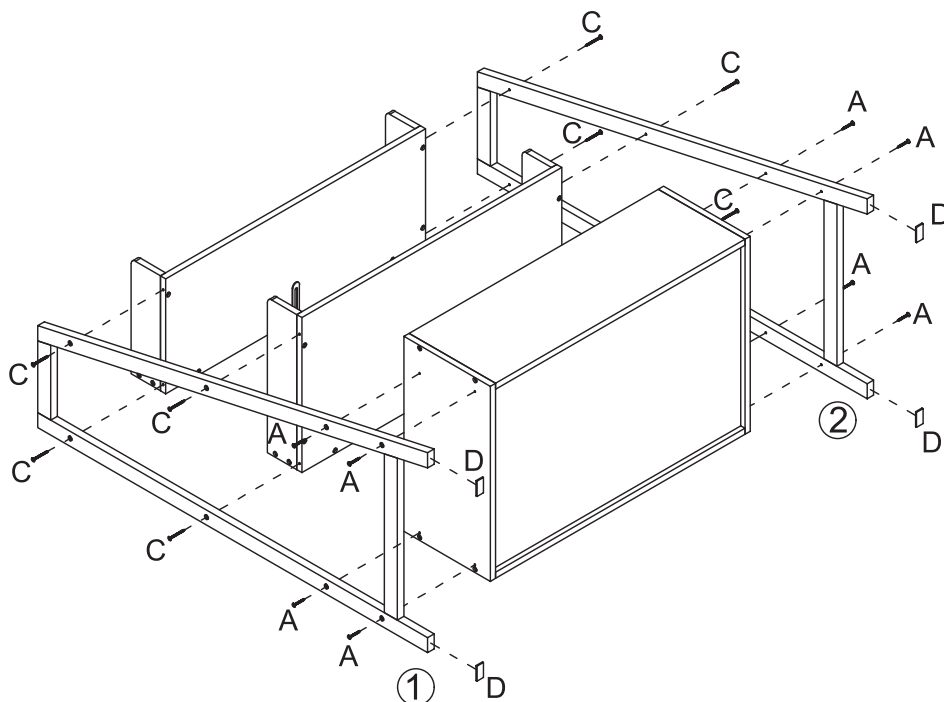

INSTALLATION INSTRUCTIONS

Step 1

- Mark a bracket hole onto the wall using a pencil.
- Using a 5mm drill bit, drill a hole in the wall using your marking in step 1.a.
- Insert the plasterboard (I) or masonry plug (H) depending on your wall surface.
- Secure your unit to the wall using screw (C).
- Cover screw holes using 12 x cover stickers (E).

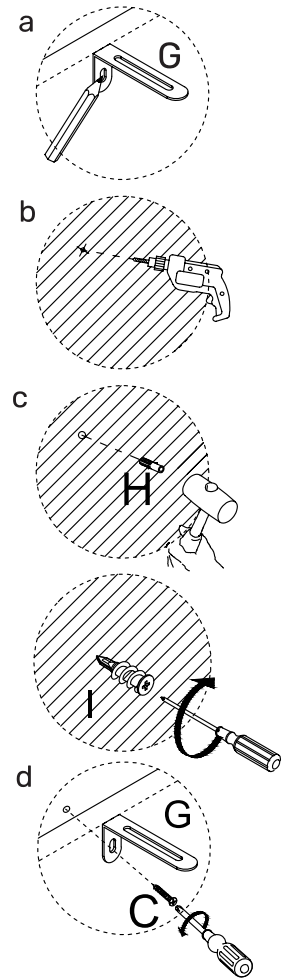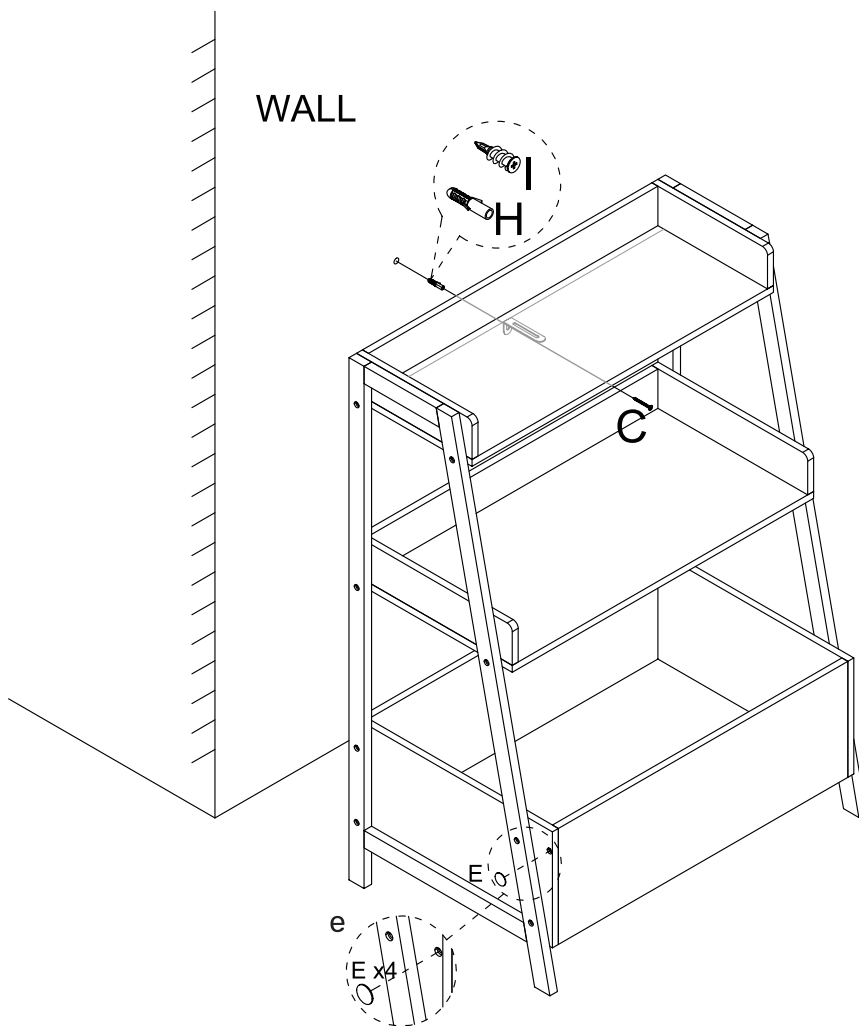

ASSEMBLY COMPLETE