HOMEBASE

TOY CHEST WHITE & PINE

INSTRUCTION MANUAL



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.




IMPORTANT: Please read these instructions before using the product and retain for future use.


SAFETY & CARE ADVICE

Please read these instructions fully before starting assembly and retain for future reference.

- · This product is not a toy
- This product is suitable for children 3+ years
- Check you have all the components and tools listed before you start assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- · Keep children and animals away from the work area; small parts could pose a choking hazard if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the component parts or the product, as this could cause damage.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drills/drivers for inserting screws during assembly, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- · Domestic use only.
- Ensure that hands and fingers are clear when closing the lid
- Maximum weight loading per compartment is 5kg (evenly distributed).

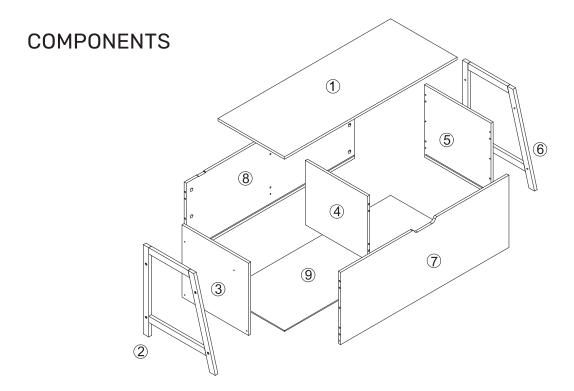


FITTINGS

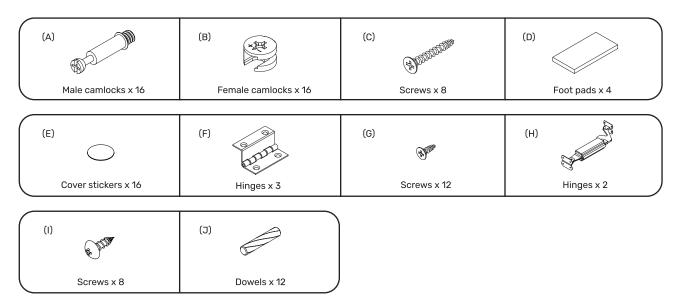

ASSEMBLY INSTRUCTIONS

Step 1

- a. Insert 16 x male camlocks (A) into panels (3, 5, 7 & 8). b. Attach 3 x hinges (F) to top panel (1) using 6 x screws (G).

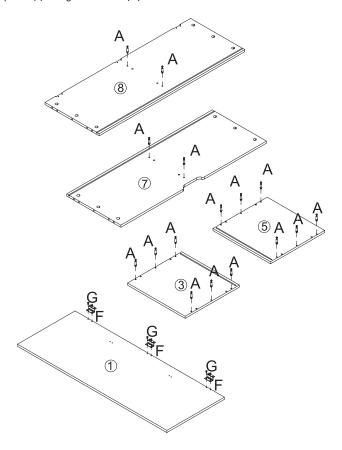


Step 2

Attach front and back panels (7 & 8) to middle panel (4) using 4 x wooden dowels (J). Secure using 4 x female camlocks (B).

Step 3

Attach side panel (5) to the partially assembled unit using 4 x wooden dowels (J). Secure with 6 x female camlocks (B).

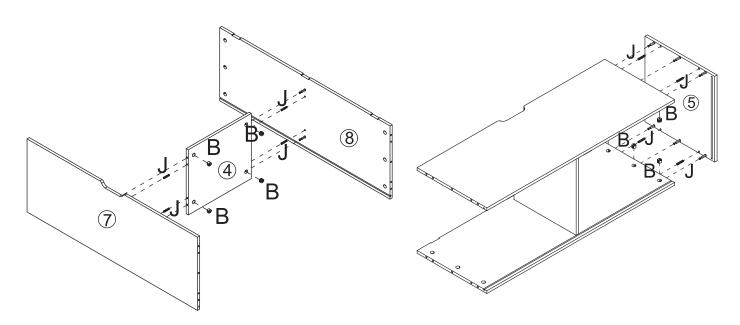



Step 4

Insert base panel (9) into the slots of the unit.

Step 5

Attach side panel (3) to the partially assembled unit using 4 x wooden dowels (J). Secure with 6 x female camlocks (B).

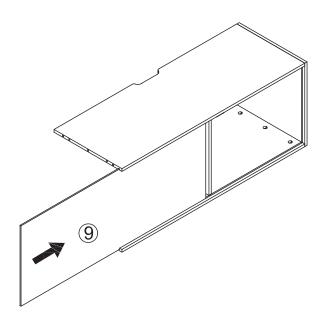

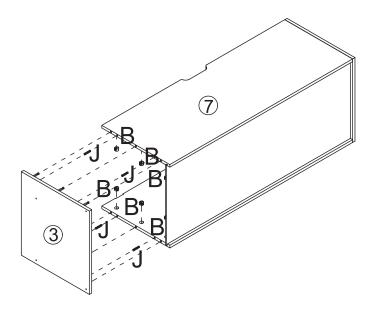



Step 6

- a. Attach 2 x frame legs (2 & 6) to the unit using 8 x screws (C).b. Stick 4 x feet pads (D) to the bottom of the frame legs.


Step 7

- a. Secure lid (1) to unit using 6 x screws (G).b. Cover screw holes using 16 x cover stickers (E).

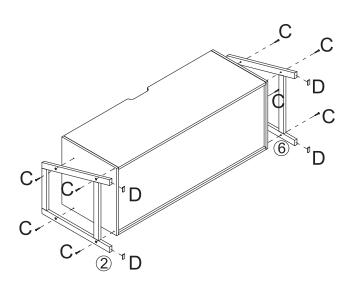

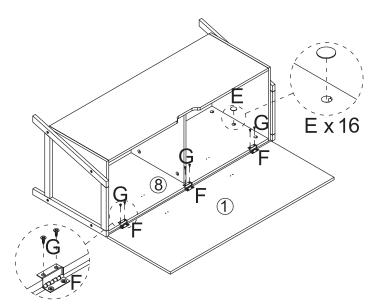

Step 8
Attach 2 x hinges (H) to the unit using 8 x screws (I).

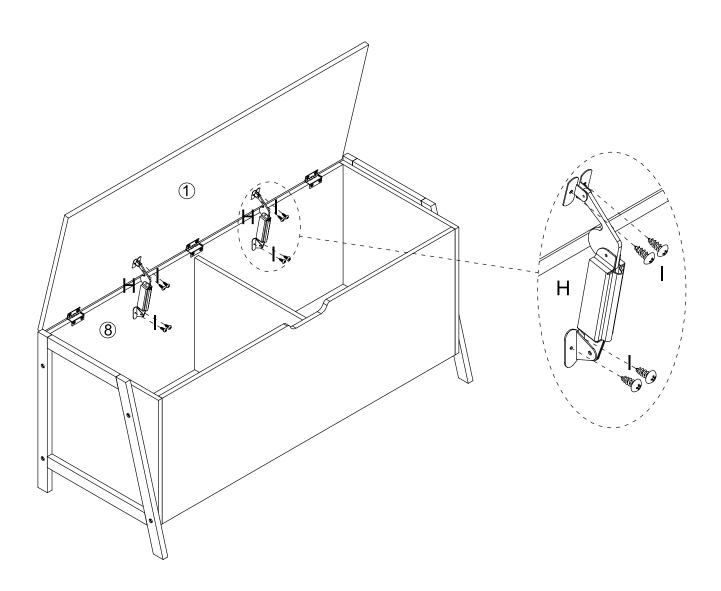

ASSEMBLY COMPLETE