


HOMEBASE

2X3 COMPACT STORAGE CUBE

INSTRUCTION MANUAL



⚠ WARNING

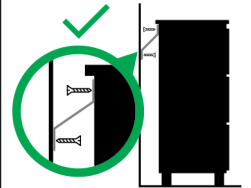

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture




IMPORTANT: Please read these instructions before using the product and retain for future use.

SAFETY & CARE ADVICE




Please read these instructions fully before starting assembly and retain for future reference.

- Check you have all the components and tools listed before you start assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area; small parts could pose a choking hazard if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the component parts or the product, as this could cause damage.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drills/drivers for inserting screws during assembly, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Domestic use only.
- Maximum loading weight per compartment is 3kg (evenly distributed).

COMPONENTS

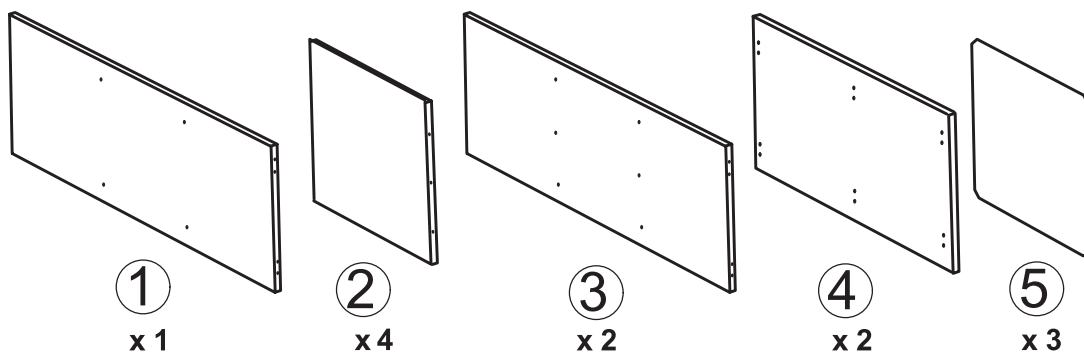


FITTINGS

(A)  Dowels x 4	(B)  Dowels x 20	(C)  Screws x 16	(D)  Allen key x 1
(E)  Nails x 30	(F)  Screw caps x 16	(G)  Wall brackets x 2	(H)  Screws x 4

ASSEMBLY INSTRUCTIONS


Step 1

Insert 4 x dowels (A) into panel (1).

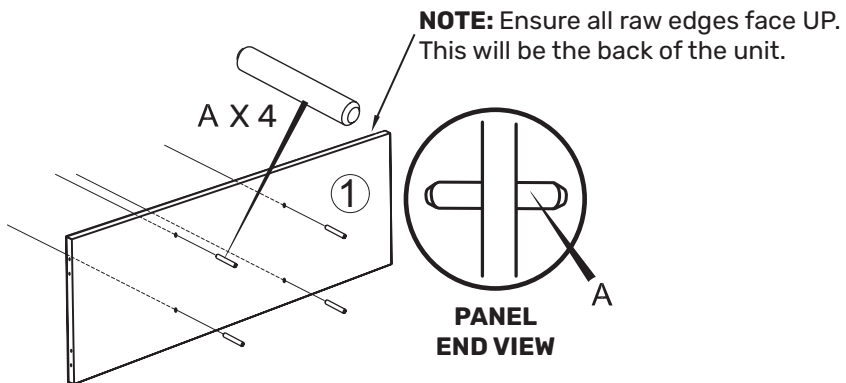


Step 2

Connect 4 x panels (2) to panel (1).

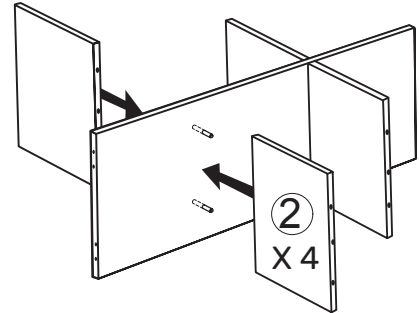


Step 3

Connect 2 x panels (3) to the unit using 8 x dowels (B). Secure with 4 x screws (C).

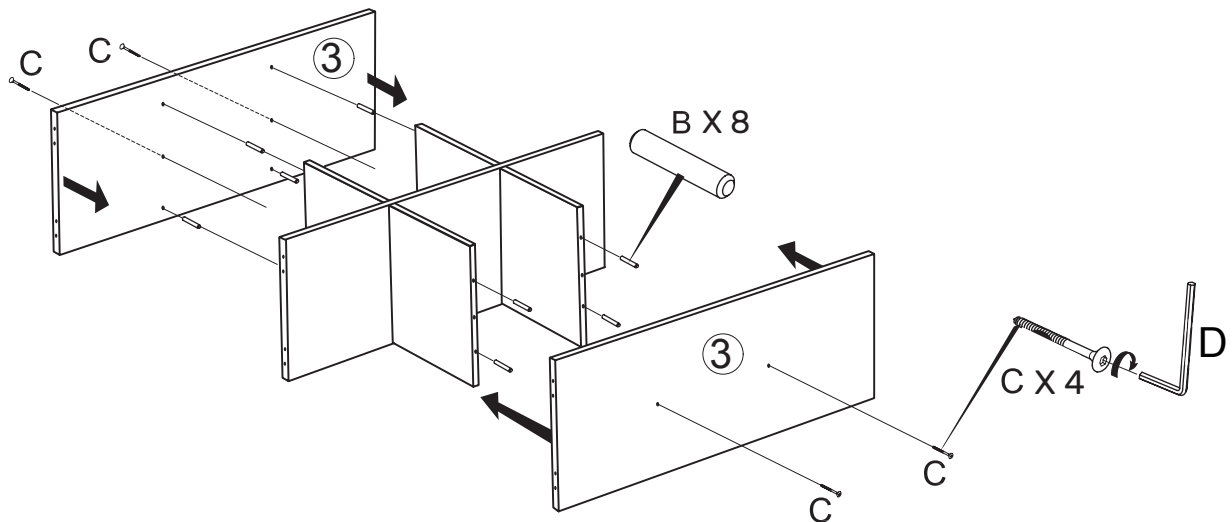


Step 4

Connect 2 x panels (4) to the unit using 12 x dowels (B).

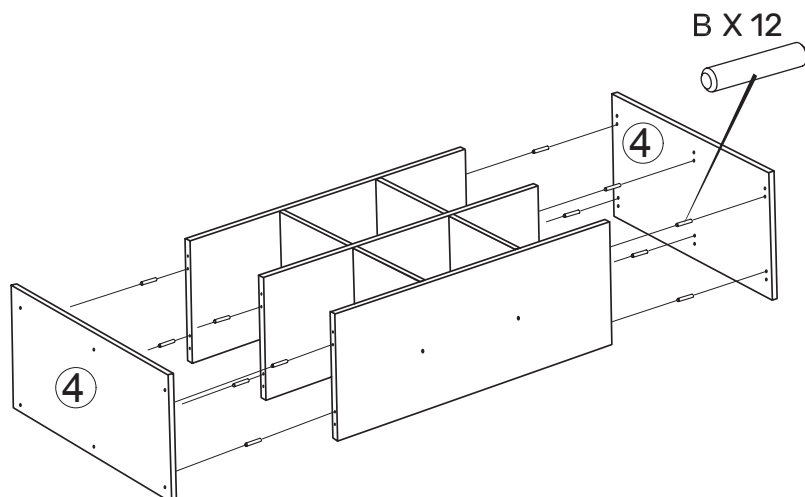


Step 5

Secure 2 x panels (4) to the unit with 12 x screws (C).

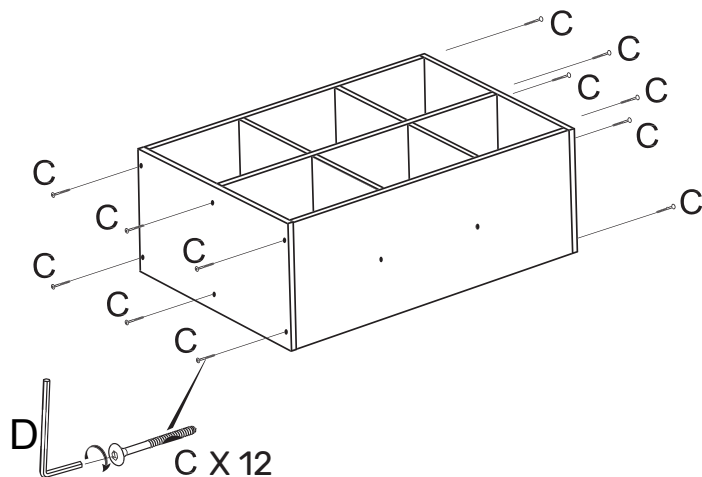


Step 6

Cover screw holes using 16 x screw caps (F).

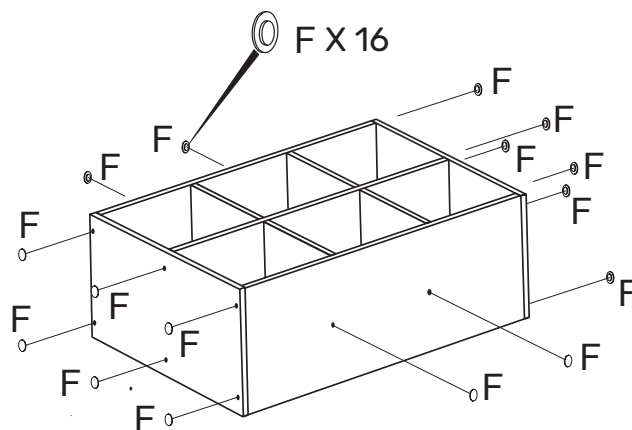

Step 7


Attach back panel by inserting 10 nails (E) into back panel (5), ensuring nails are positioned evenly, as shown.

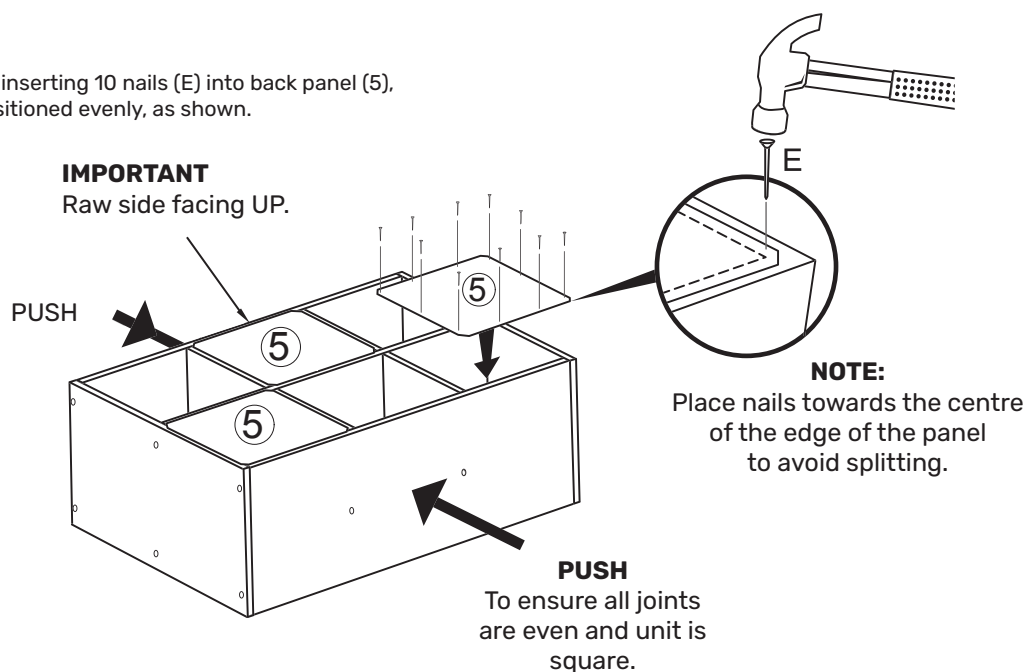

WARNING

TO AVOID THE RISK OF UNIT TIPPING OVER, FIX IT TO THE WALL USING THE WALL BRACKET SUPPLIED, AS SHOWN.

As wall materials vary, wall plugs for fixing to wall are not included. For advice on suitable wall plugs, contact your local store.

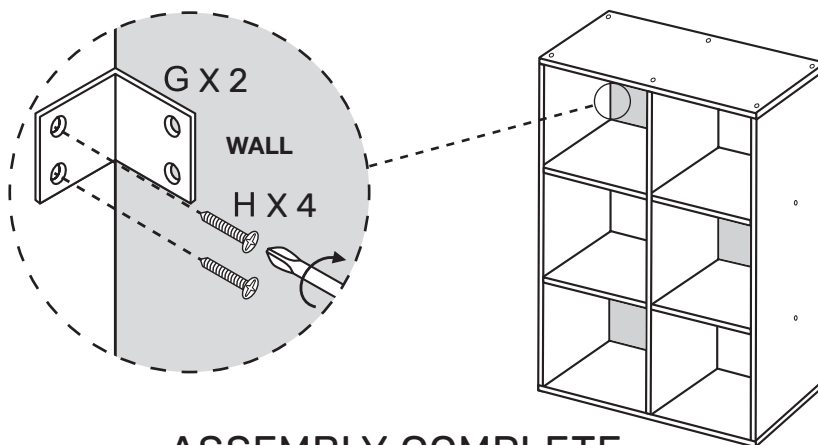

ASSEMBLY COMPLETE

MADE IN CHINA

Distributed by:

Visy Retail Services Pty Ltd (AU): 1300 734 714

Visy Board Limited (NZ): 0800 443 058